


**AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION**

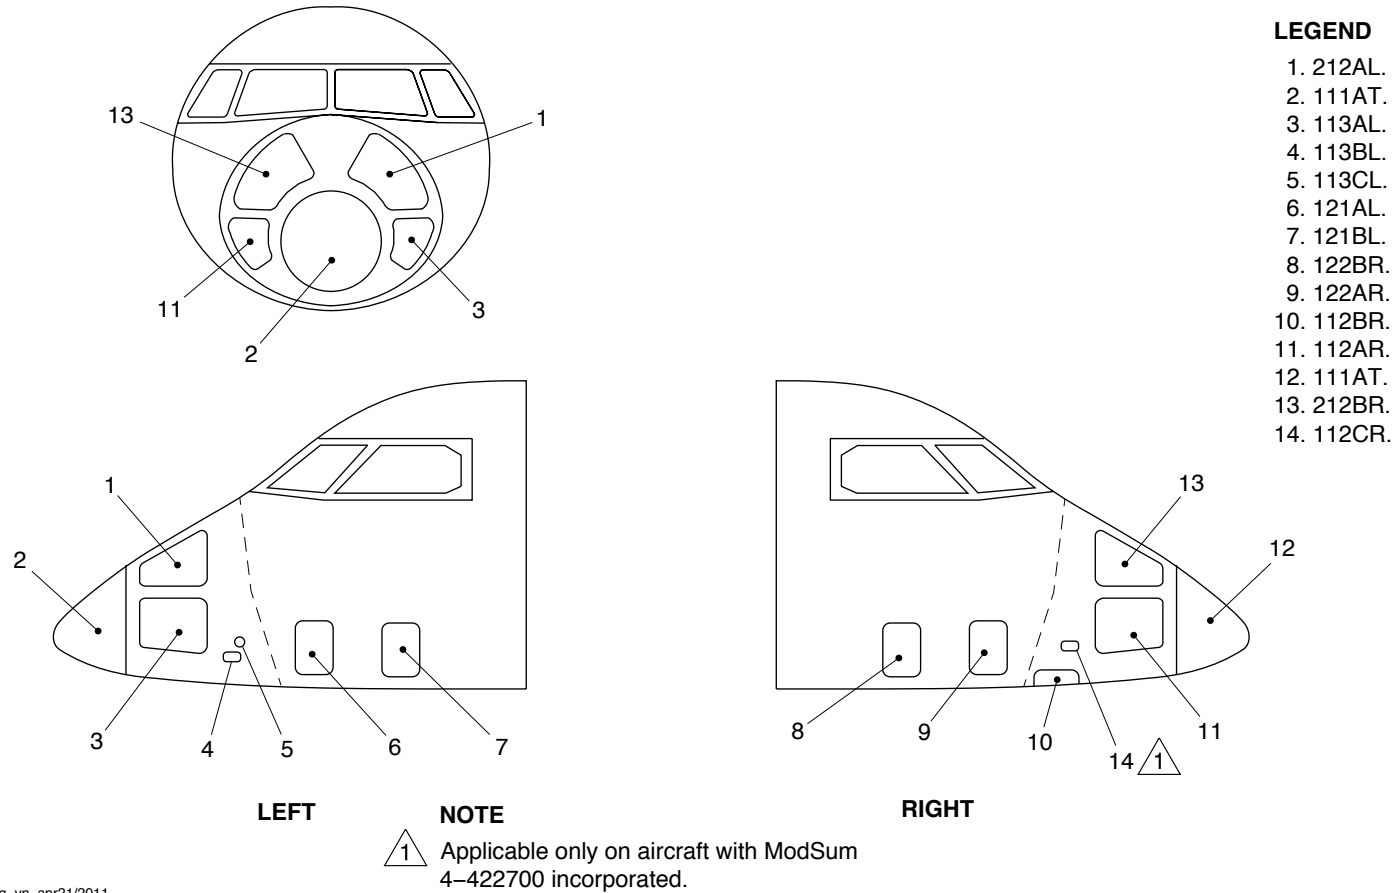

fsi42a01.dg, vn, apr21/2011



Nose Access Panels  
Figure 3

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-10-00  
Config 001

**53-10-00**

**Config 001**  
Page 6  
Oct 05/2011

AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION

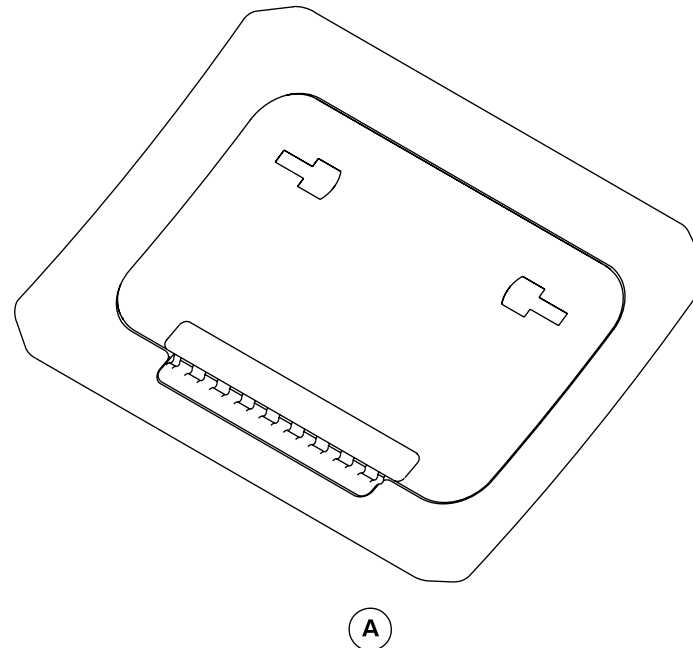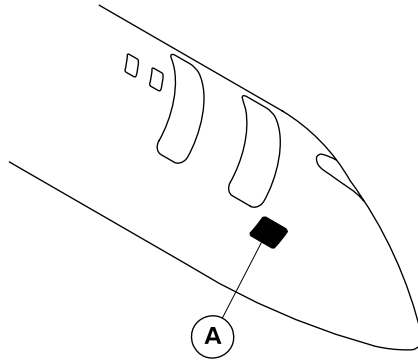

fs611a01.dg, vn, apr07/2011


Forward Center Fuselage Access Panels  
Figure 5

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-20-00  
Config 001

**53-20-00**

**Config 001**  
Page 9  
Oct 05/2011

**AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION**

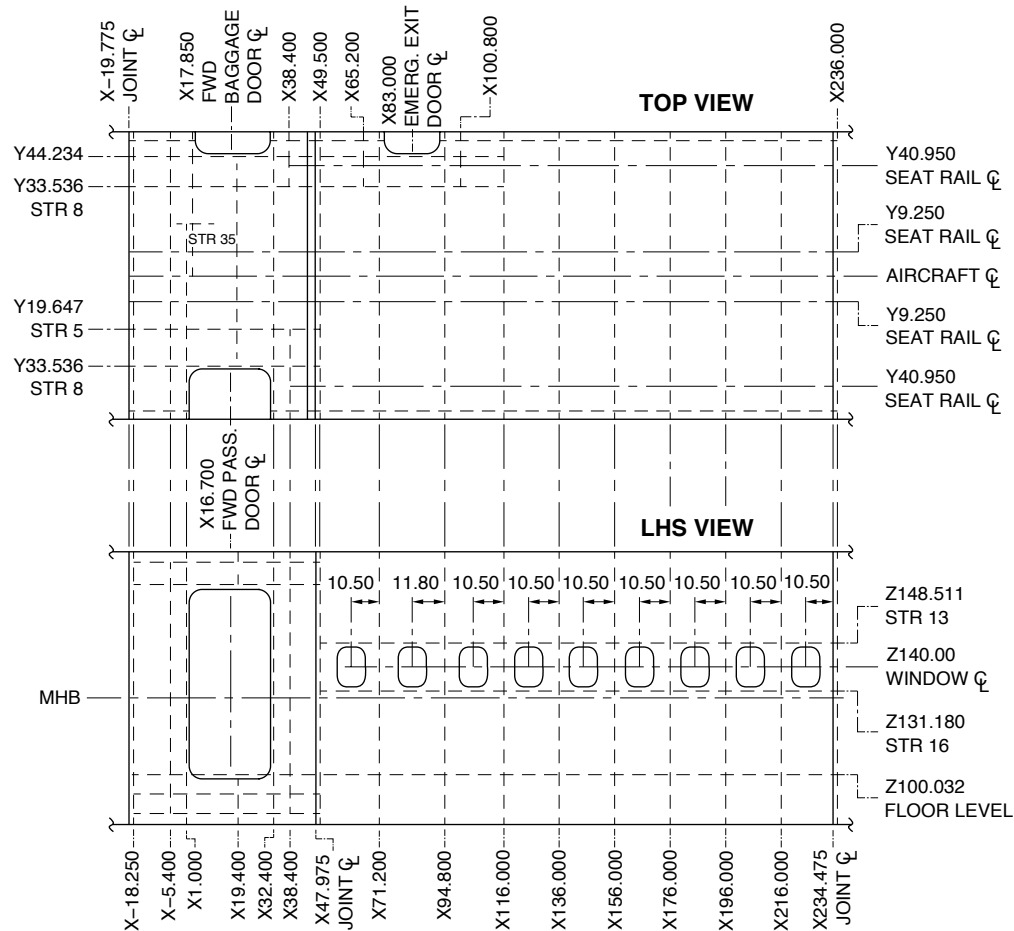

fsk53a01.dg, vn, apr06/2011


Forward Center Fuselage Dimensions  
Figure 3

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-20-00  
Config 001

**53-20-00**

**Config 001**  
Page 7  
Oct 05/2011

**AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION**

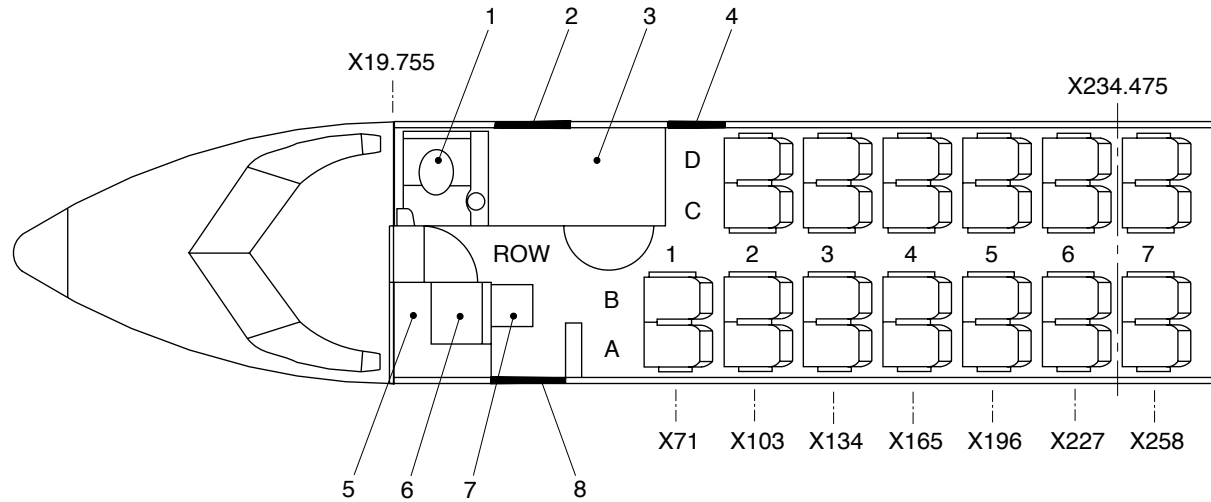

**STANDARD INTERIOR CONFIGURATION**

**LEGEND**

1. Lavatory.
2. Forward baggage door.
3. Forward baggage compartment.
4. Emergency door – type II / III exit.
5. Avionics rack.
6. Wardrobe.
7. No.1 cabin attendant seat.
8. Forward passenger door – type I exit.

fsh85a01.dg, vn, apr07/2011


Forward Center Fuselage Floor Layout  
Figure 7

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-20-00  
Config 001

**53-20-00**

**Config 001**  
Page 11  
Oct 05/2011

**AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION**

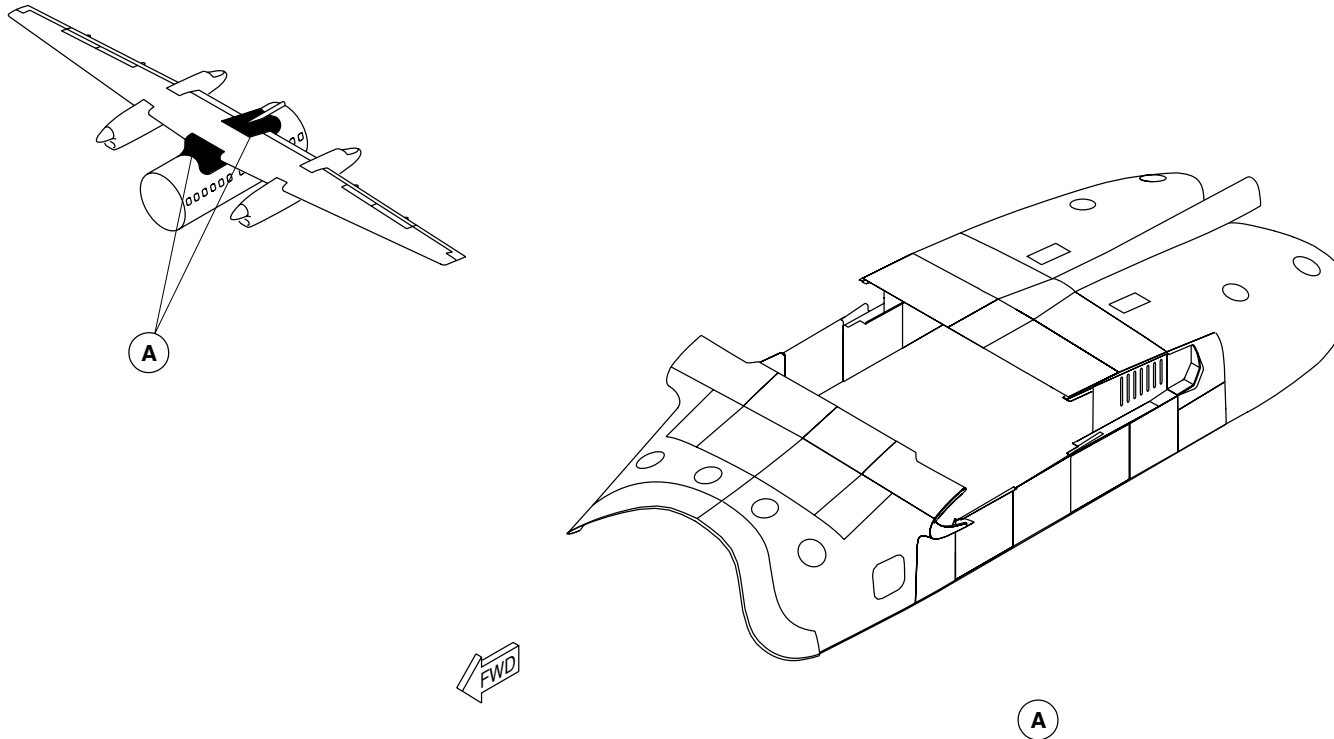

fs872a01.cgm



**FUSELAGE TO WING FAIRING LOCATOR**  
Figure 3

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-30-00  
Config 001

**53-30-00**

**Config 001**  
Page 6  
Aug 05/2008

**AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION**

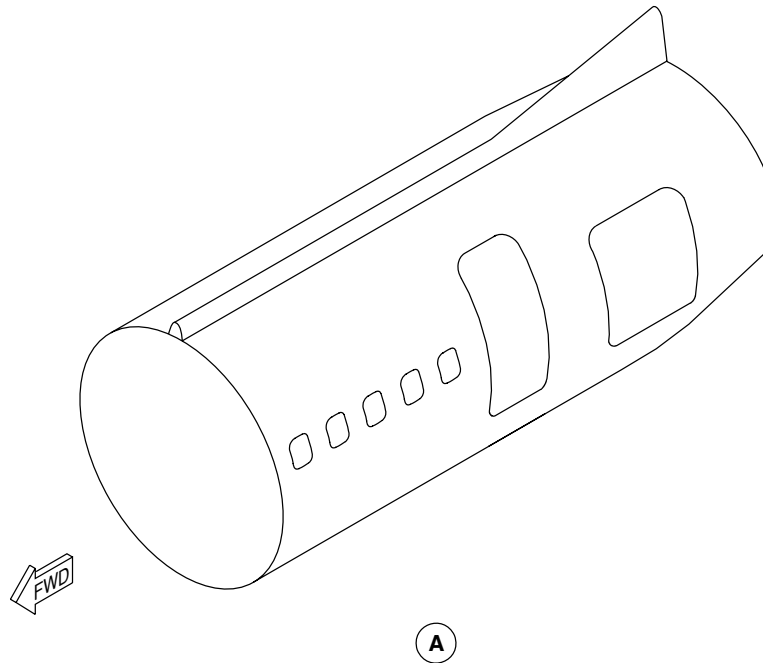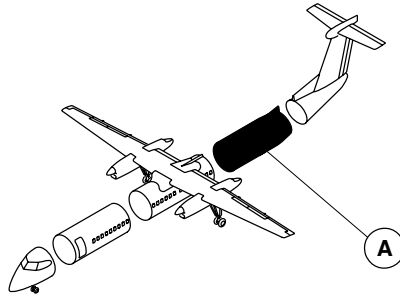

fs888a01.cgm


**AFT CENTER FUSELAGE LOCATOR**  
Figure 1

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-40-00  
Config 001

**53-40-00**

**Config 001**  
Page 4  
Aug 05/2008

## AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION

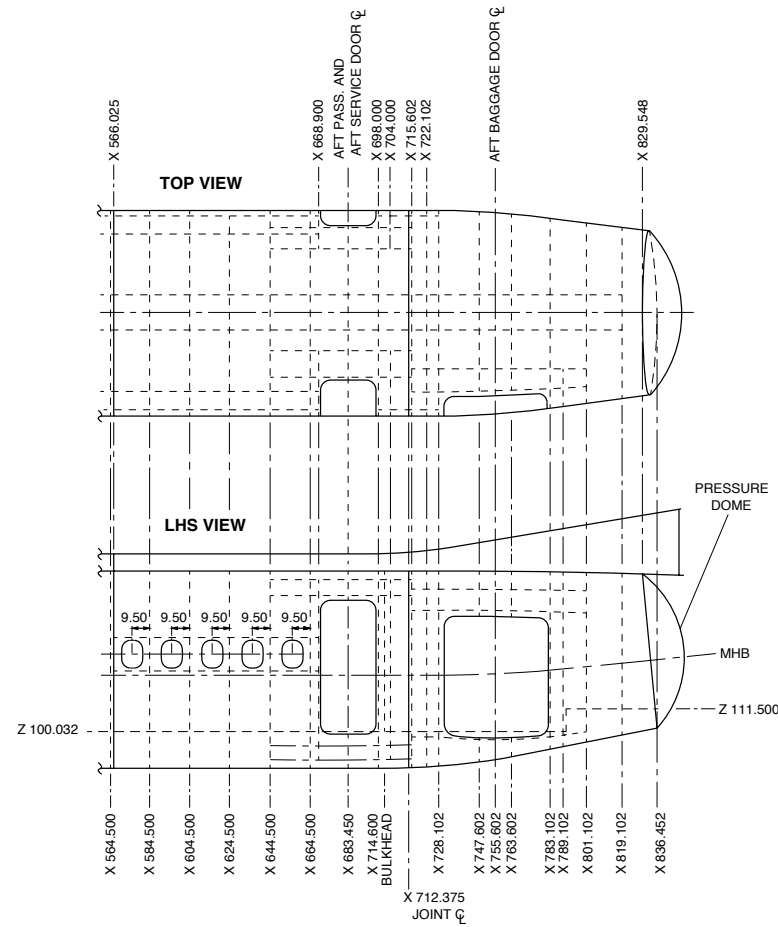

fsm33a01.cgm


AFT CENTRE FUSELAGE DIMENSIONS  
Figure 3

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-40-00  
Config 001

**53-40-00**

**Config 001**  
Page 6  
Aug 05/2008

**AIRCRAFT MAINTENANCE MANUAL – SYSTEM DESCRIPTION SECTION**

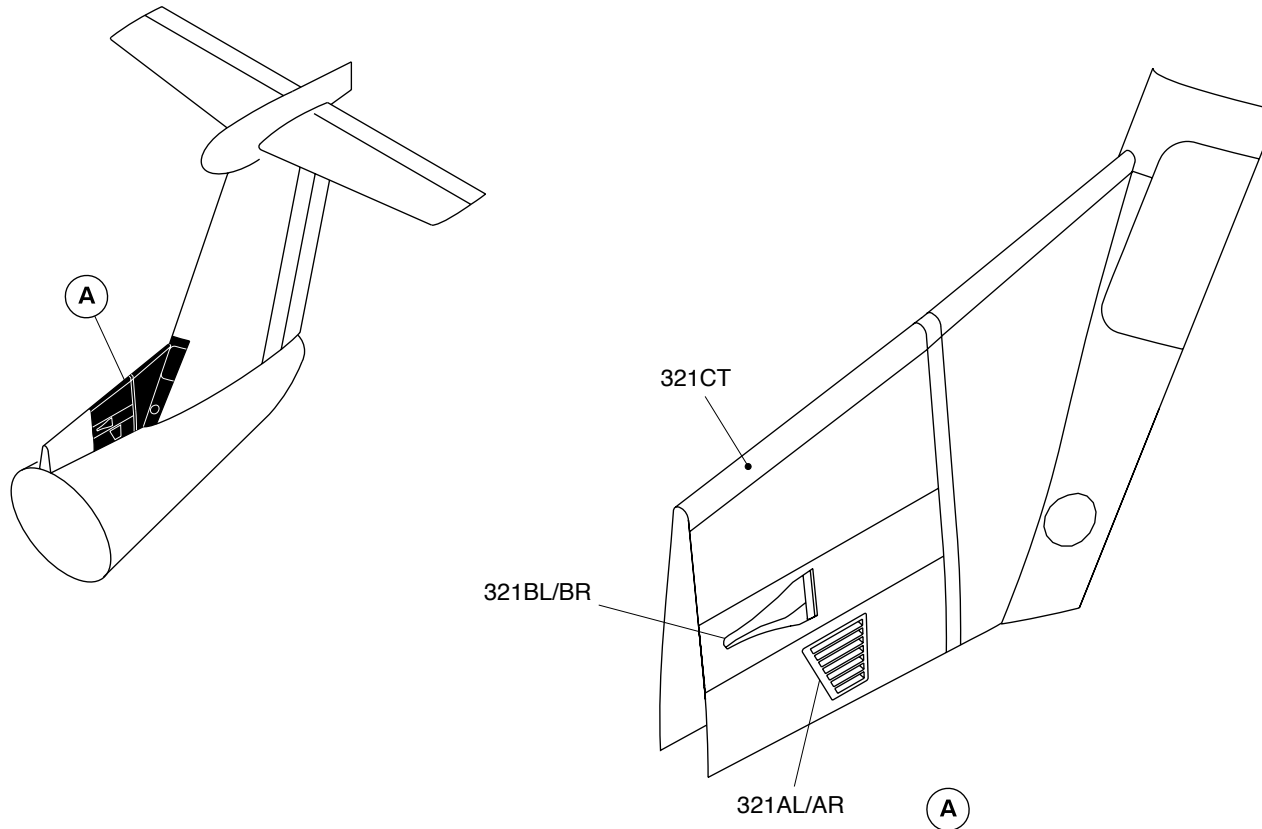

fs852a01.dg, vn, apr21/2011

Aft Fuselage, Aft Fuselage Dorsal Fairing  
Figure 3

PSM 1-84-2A – MASTER  
EFFECTIVITY:  
See first effectivity on page 2 of 53-50-00  
Config 001

**53-50-00**

**Config 001**  
Page 5  
Oct 05/2011