




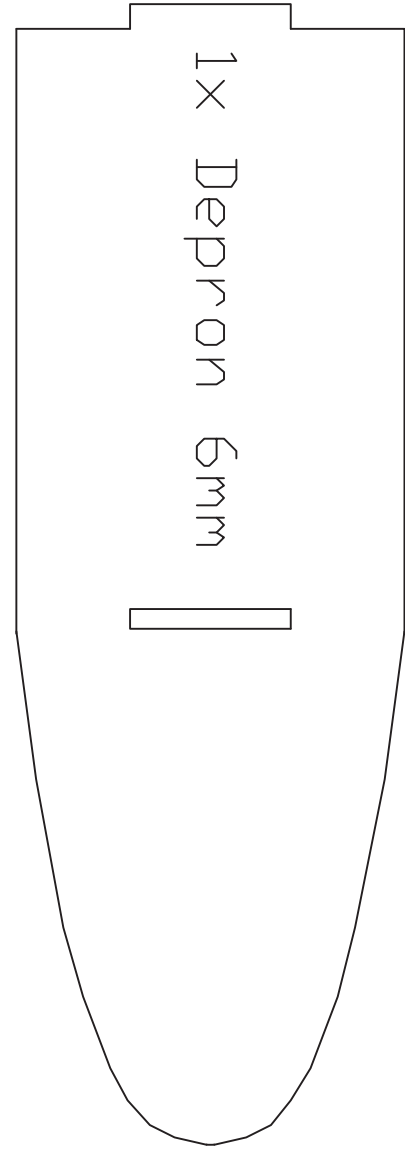


1x Depron 6mm

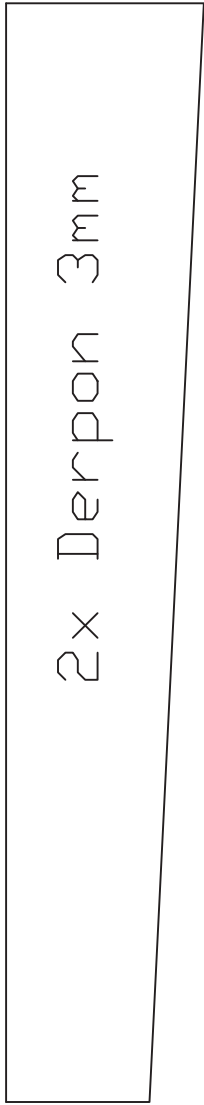


2x Derpon 3mm

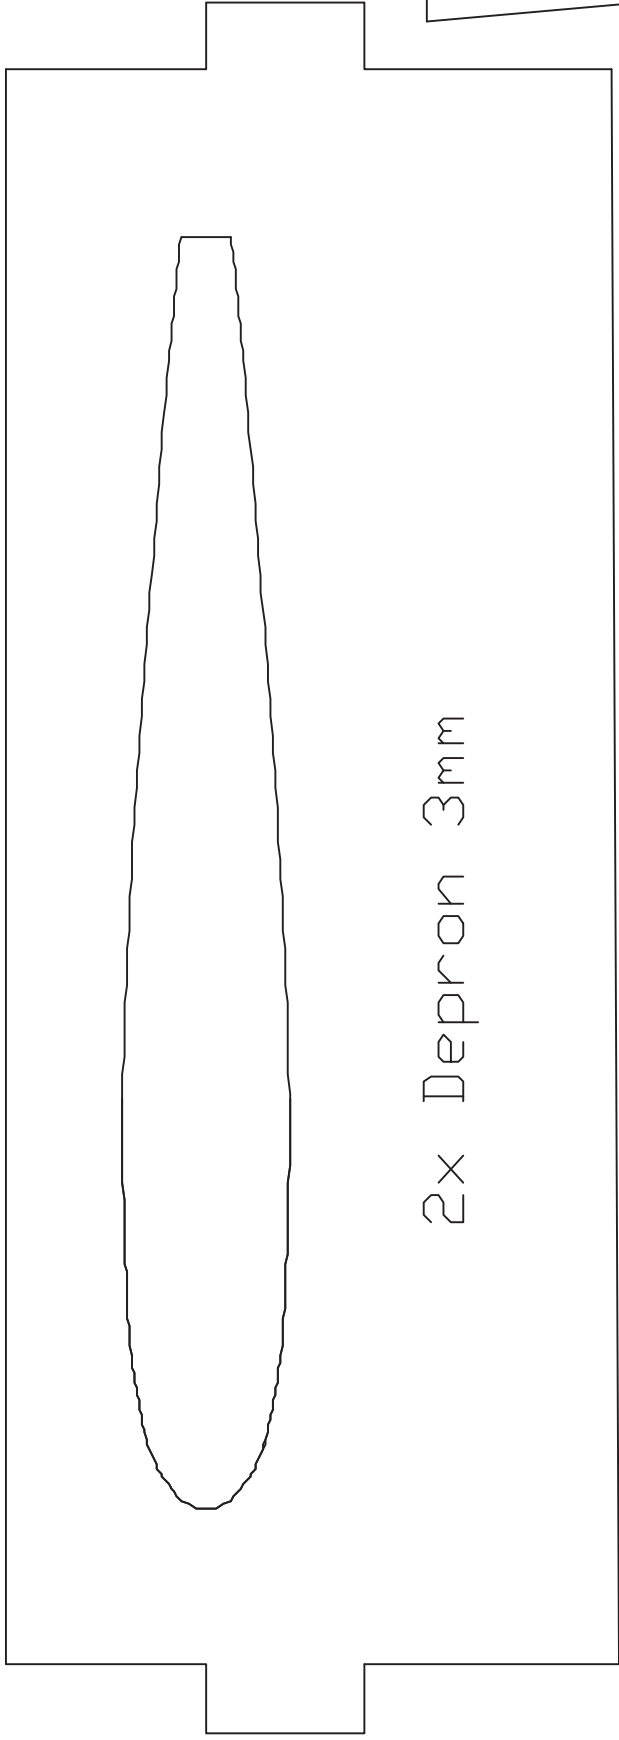

2x Depron 3mm

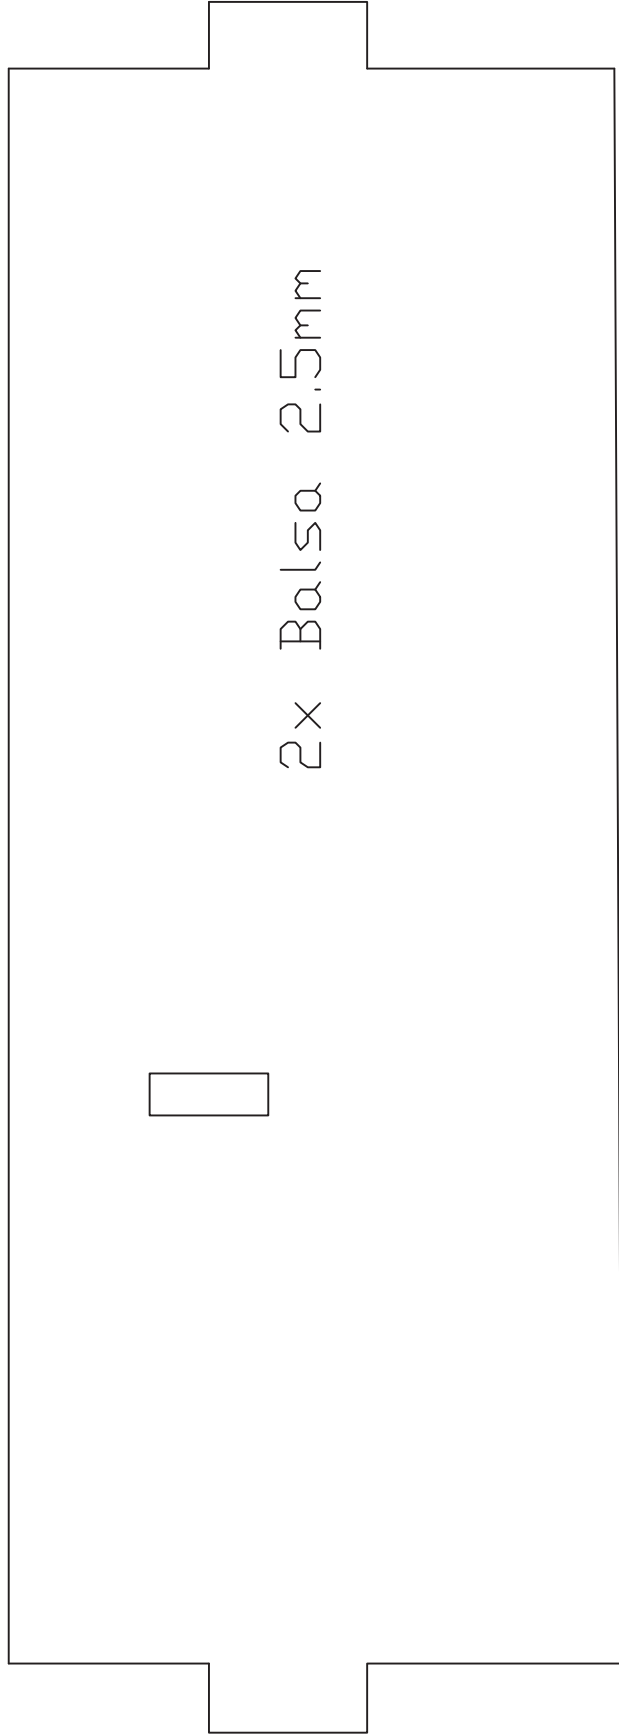


2x Balsa 2.5mm

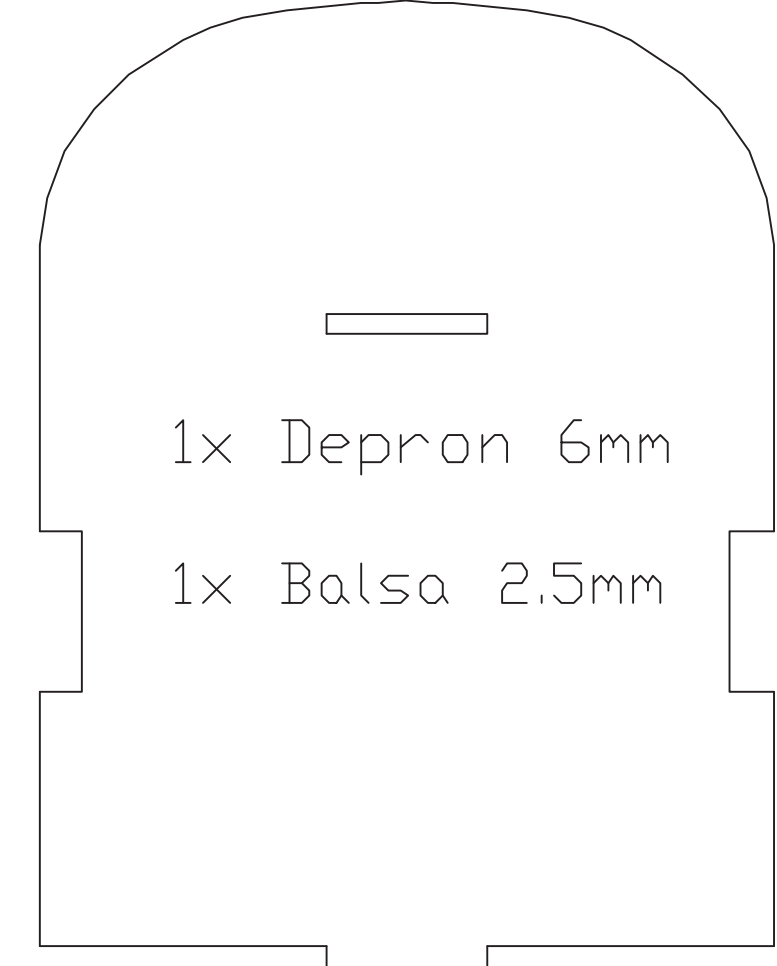


1x Depron 6mm

1x Balsa 2.5mm

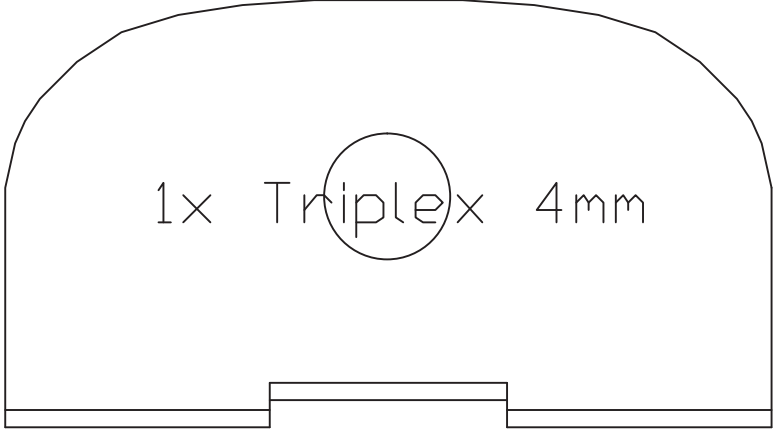

1x Triplex 4mm

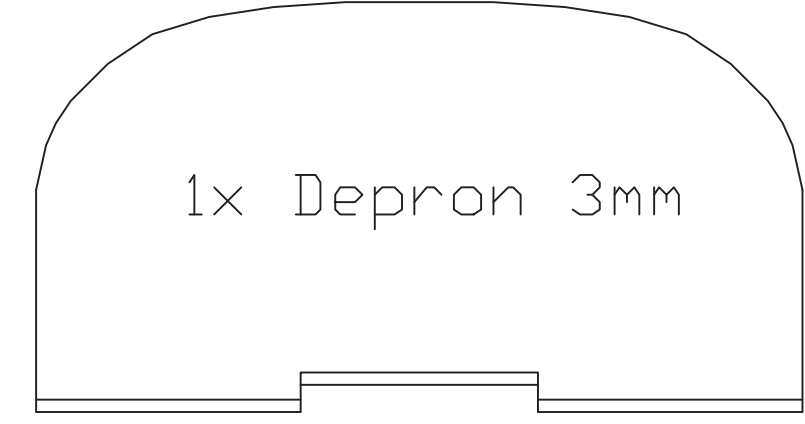

1x Depron 3mm



2x Balsa 2.5mm



2x Derpon 6mm



1x Depron 6mm



2x Derpon 6mm




2x Derpon 6mm






2x Derpon 6mm



2x Derpon 6mm

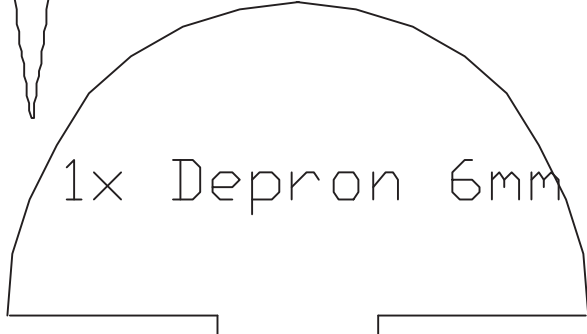


1x Depron 6mm

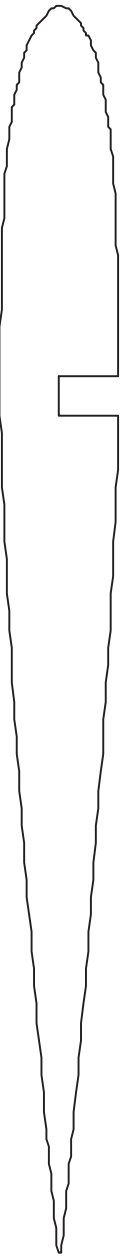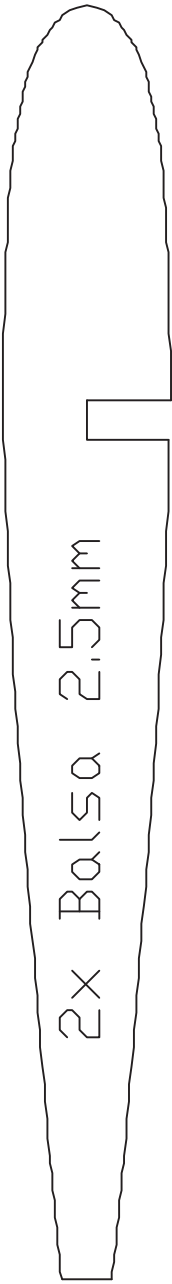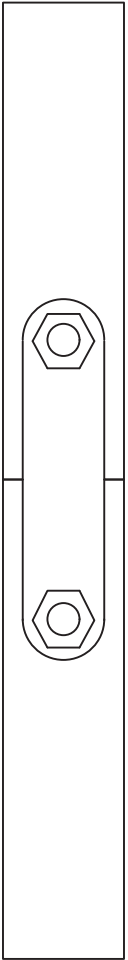

2x Derpon 6mm



2x Derpon 6mm

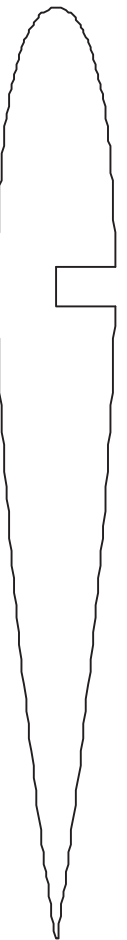


2x Derpon 6mm



2x Derpon 6mm




2x Derpon 6mm

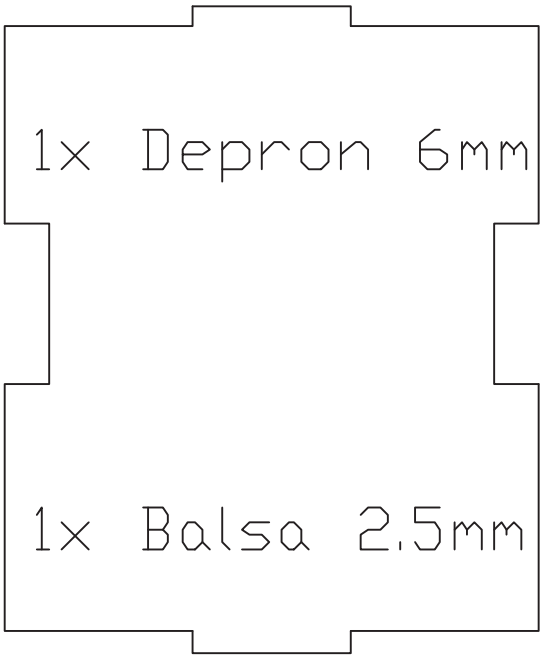

1x Depron 6mm

1x Balsa 2.5mm

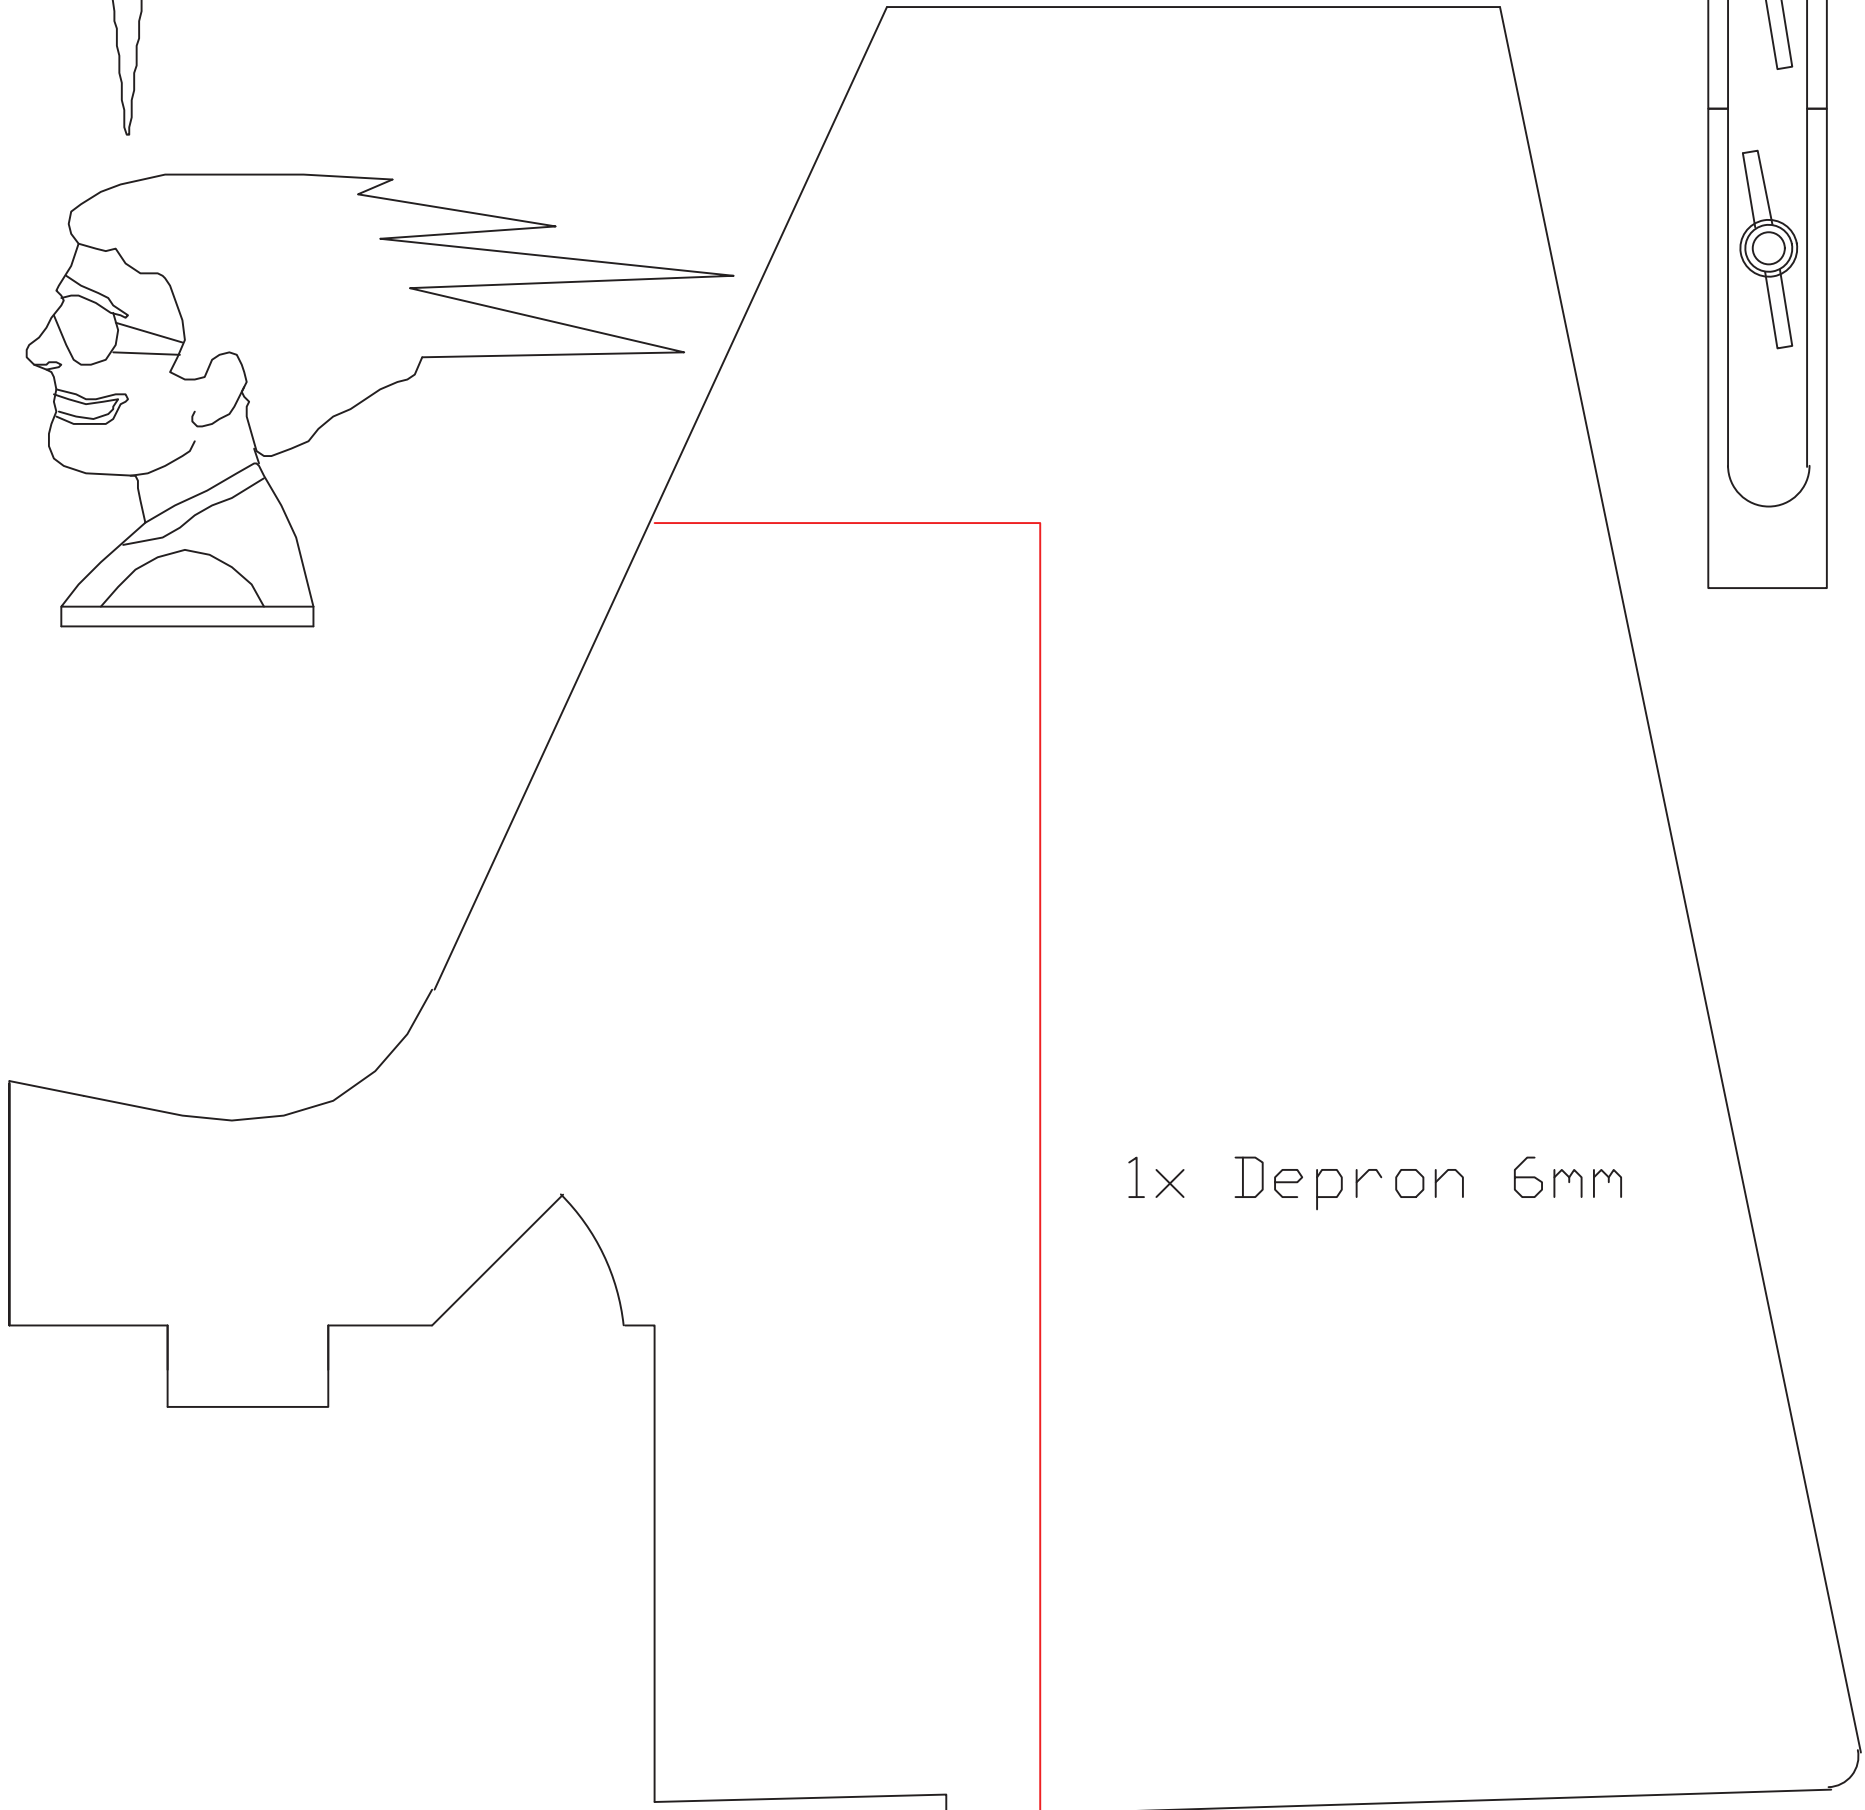

1x Depron 6mm

