



STEP 1 LAMINATE THE TWO LEADING EDGE PARTS. USE PINS AND BUILDING BOARD TO ENSURE STRAIGHTNESS.

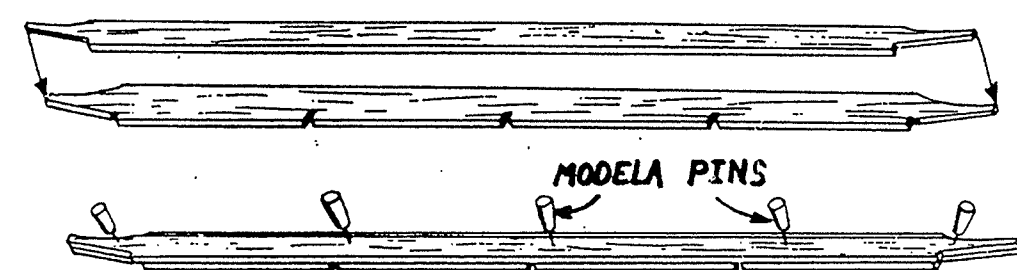


STEP 2

TRIM THE REAR OF ALL 5 RIBS TO A POINT. THIS IS BECAUSE DIES DON'T CUT POINTS WELL.

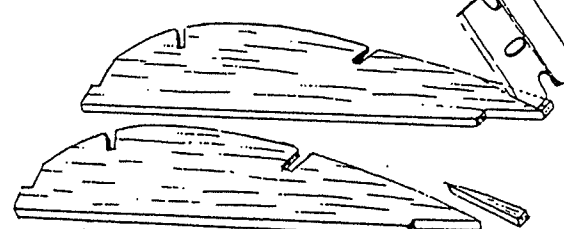


STEP 3


PLACE PLANS OVER BUILDING BOARD. COVER WITH PLASTIC-WRAP. BUILD THE WING TIPS OVER THE PLANS USING PINS AND GLUE. REMOVE WING TIPS FROM PLANS WHEN DRY.

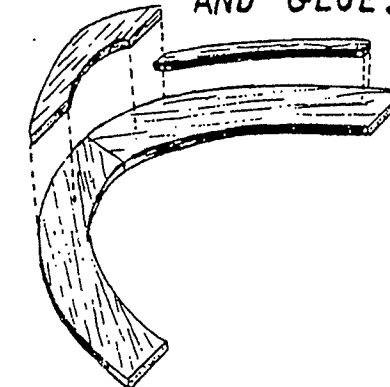

STEP 4 BUILD THE CENTER SECTION OF THE WING OVER THE PLANS. USE PINS AND GLUE. MAKE SURE EACH RIB IS VERTICAL.


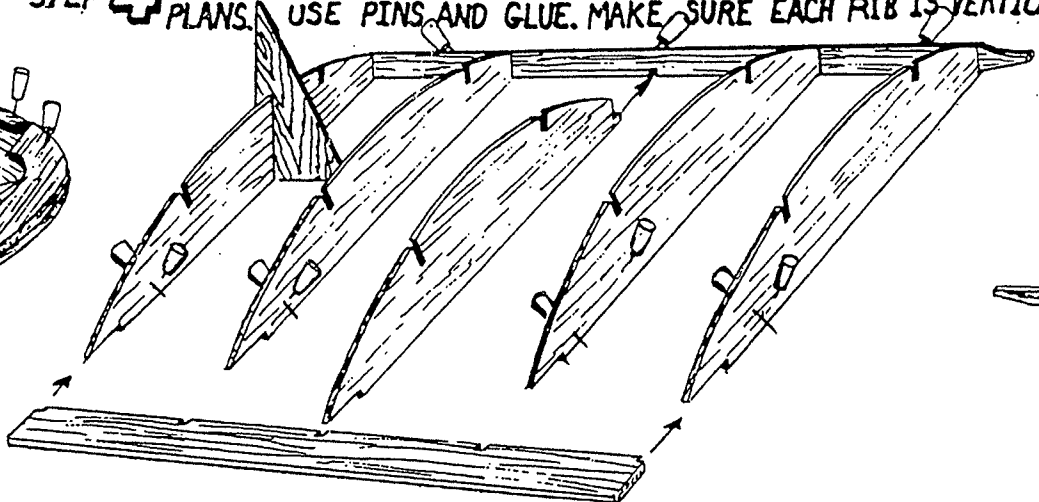


STEP 5 INSTALL THE TWO IDENTICAL SPARS. HOLD WITH PINS WHILE THE GLUE DRIES.

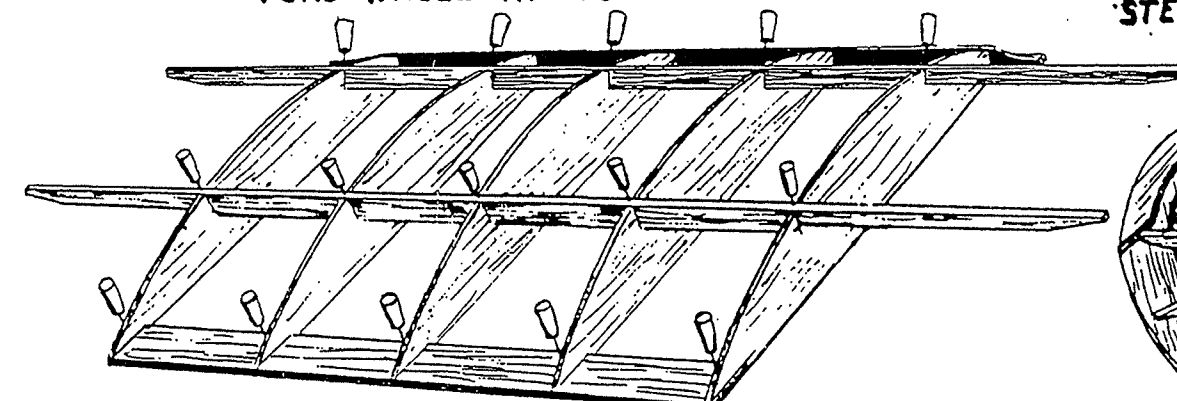

STEP 6

GLUE WING TIPS IN PLACE USING BALSA DIHEDRAL JIG TO KEEP WING TIPS AT CORRECT HEIGHT. ALSO HOLD WITH PINS WHILE THE GLUE DRIES.

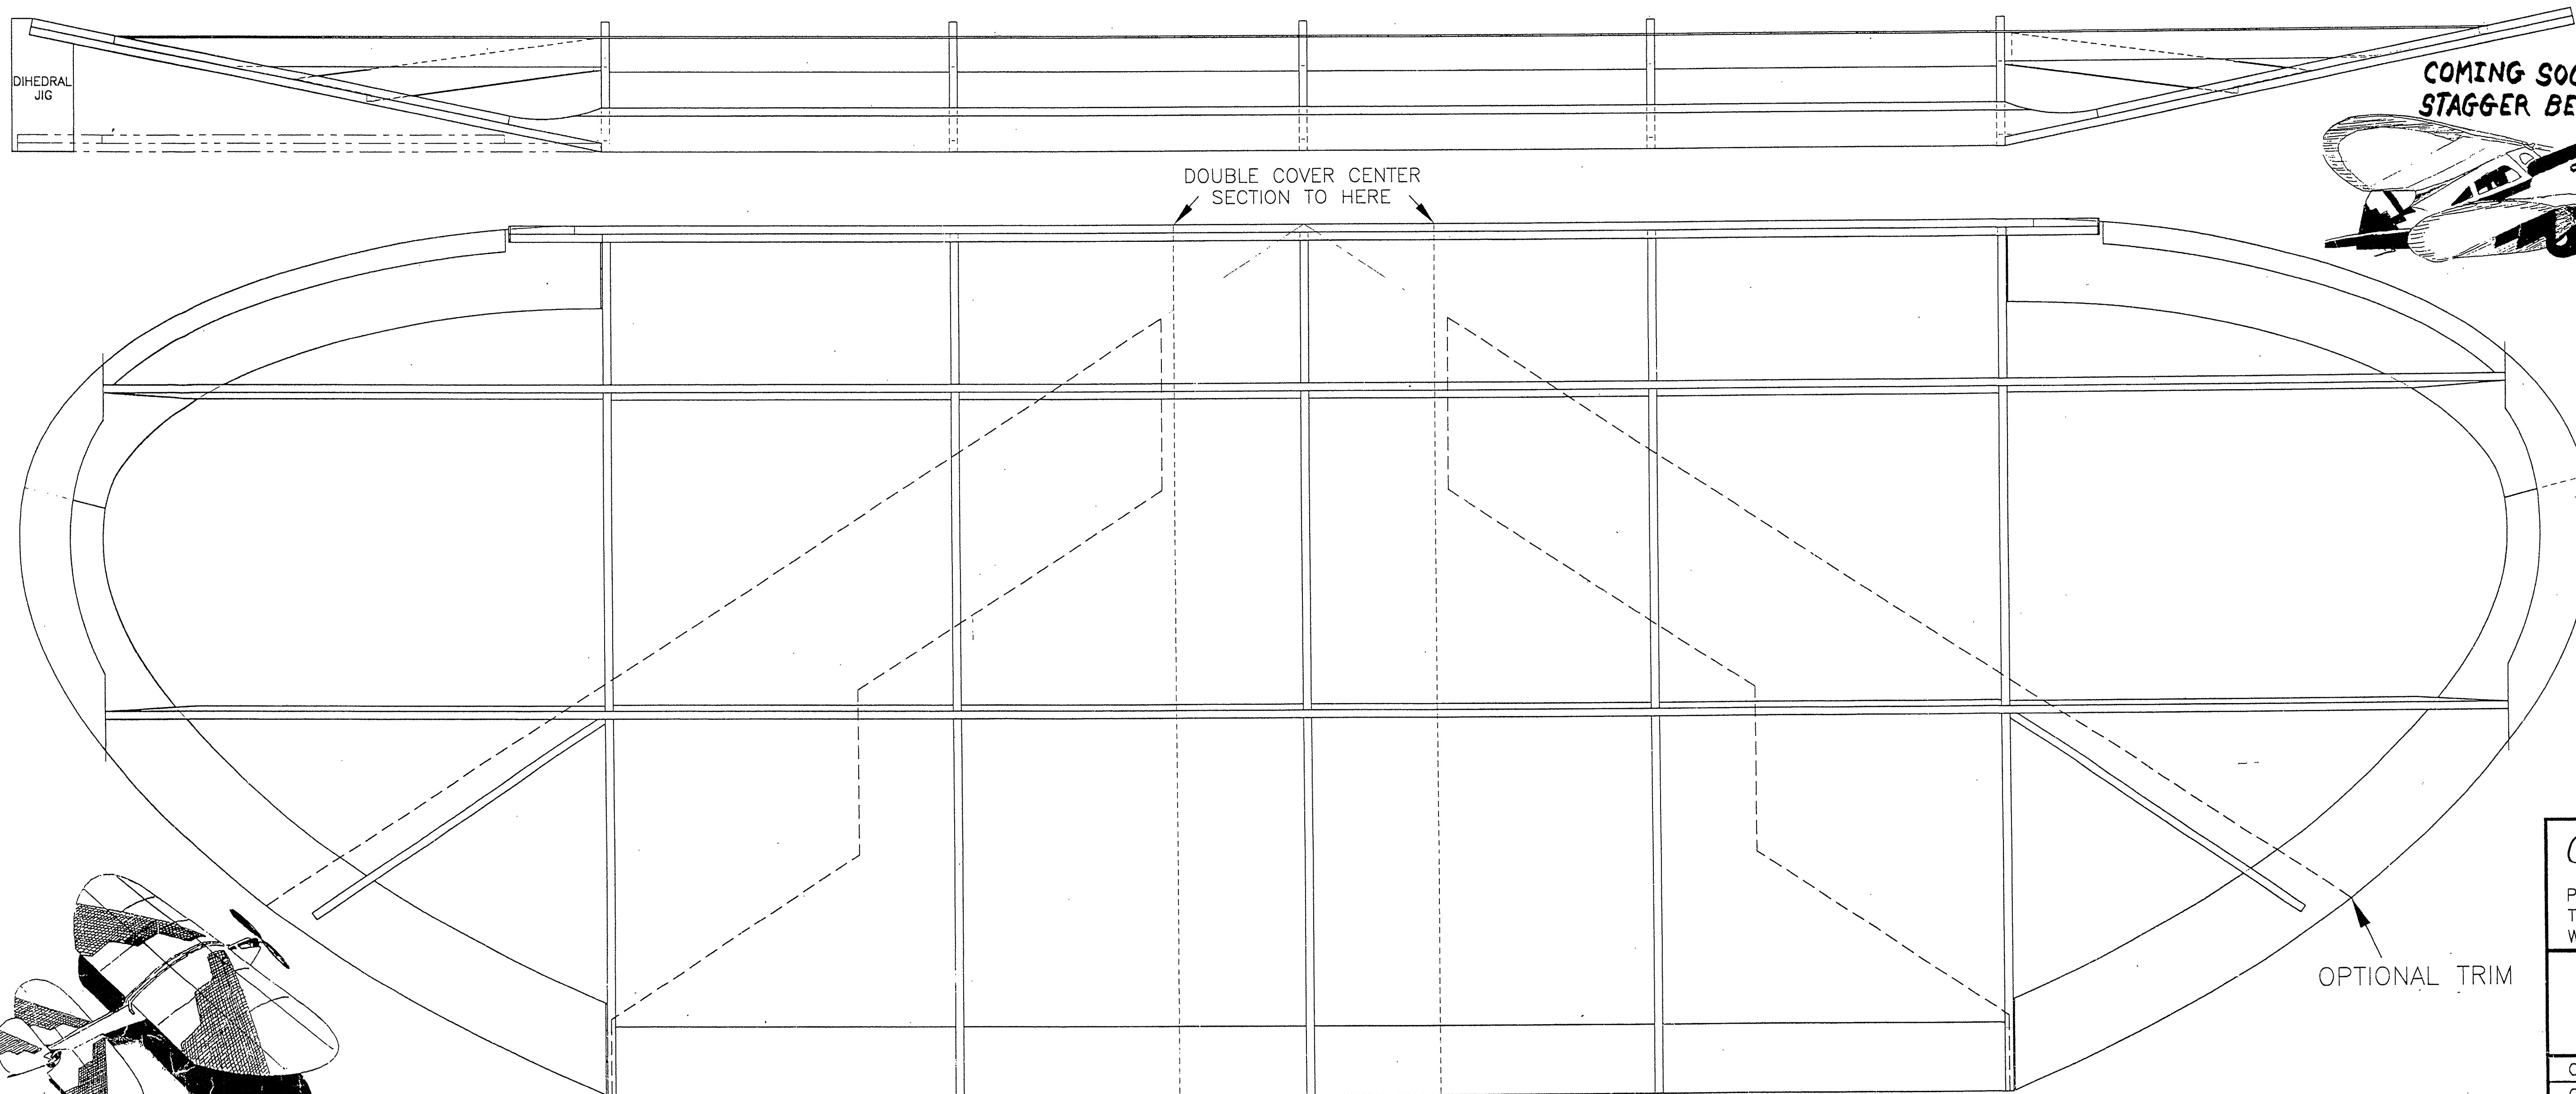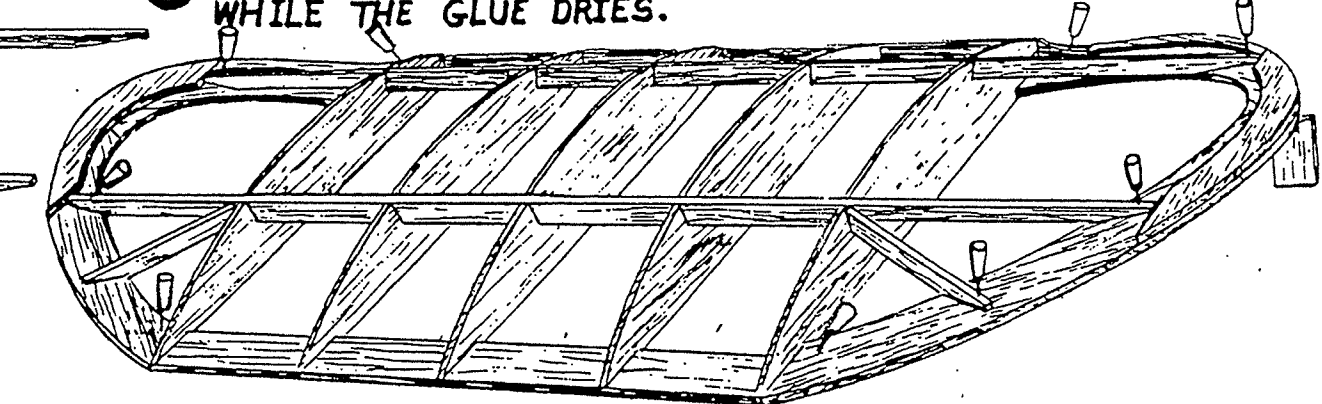

COPYRIGHT: ©1999 CLANCY AVIATION

CLANCY AVIATION

P.O. BOX 4125, MESA AZ, 85211-4125
TEL: 480-649-1534 FAX: 480-649-9040
WEB: www.clancyaviation.com

UNIVERSAL WING™
29 INCH

ORIGINAL DESIGN BY: ANDY CLANCY
CAD DRAWING BY: RANDY HEYDON
SCALE: 1:1 REV: N/C 7/99 SHT: 1 OF 1