


- 5- ALIGN THE FRAME OVER THE FURN AND ADD THE SPARS AND LEADING EDGES. TACK GLUE A 3/4" X 4" Balsa SHEET FROM THE SPAR AFT TO KEEP THE WING-ALIGNED.
- 6- REMOVE THE CRUTCH-WING-ASSEMBLY FROM THE FURN AND COVER THE BOTTOM OF THE WING-AND FLAP RECESS, IF FLAPS ARE USED. KEEP THE LEGS ON RIBS W-7
- 7- INSTALL WING-TUBES, SERVO MOUNTS 4 WING-MOUNT BLOCKS. COVER TOP AND BOTTOM OF WING-TUBES. REMOVE THE LEGS. ONE LEG MAY BE REMOVED.
- 8- ADD THE FORMERS, F-1, F-2, F-3 ARE FULL FORMERS, AND ARE NOT GLED IN PLACE. THE STRINGERS WILL HOLD THEM. THE REMAINING FORMER TOP HALVES ARE GLED IN PLACE AND THE STRINGERS ADDED.

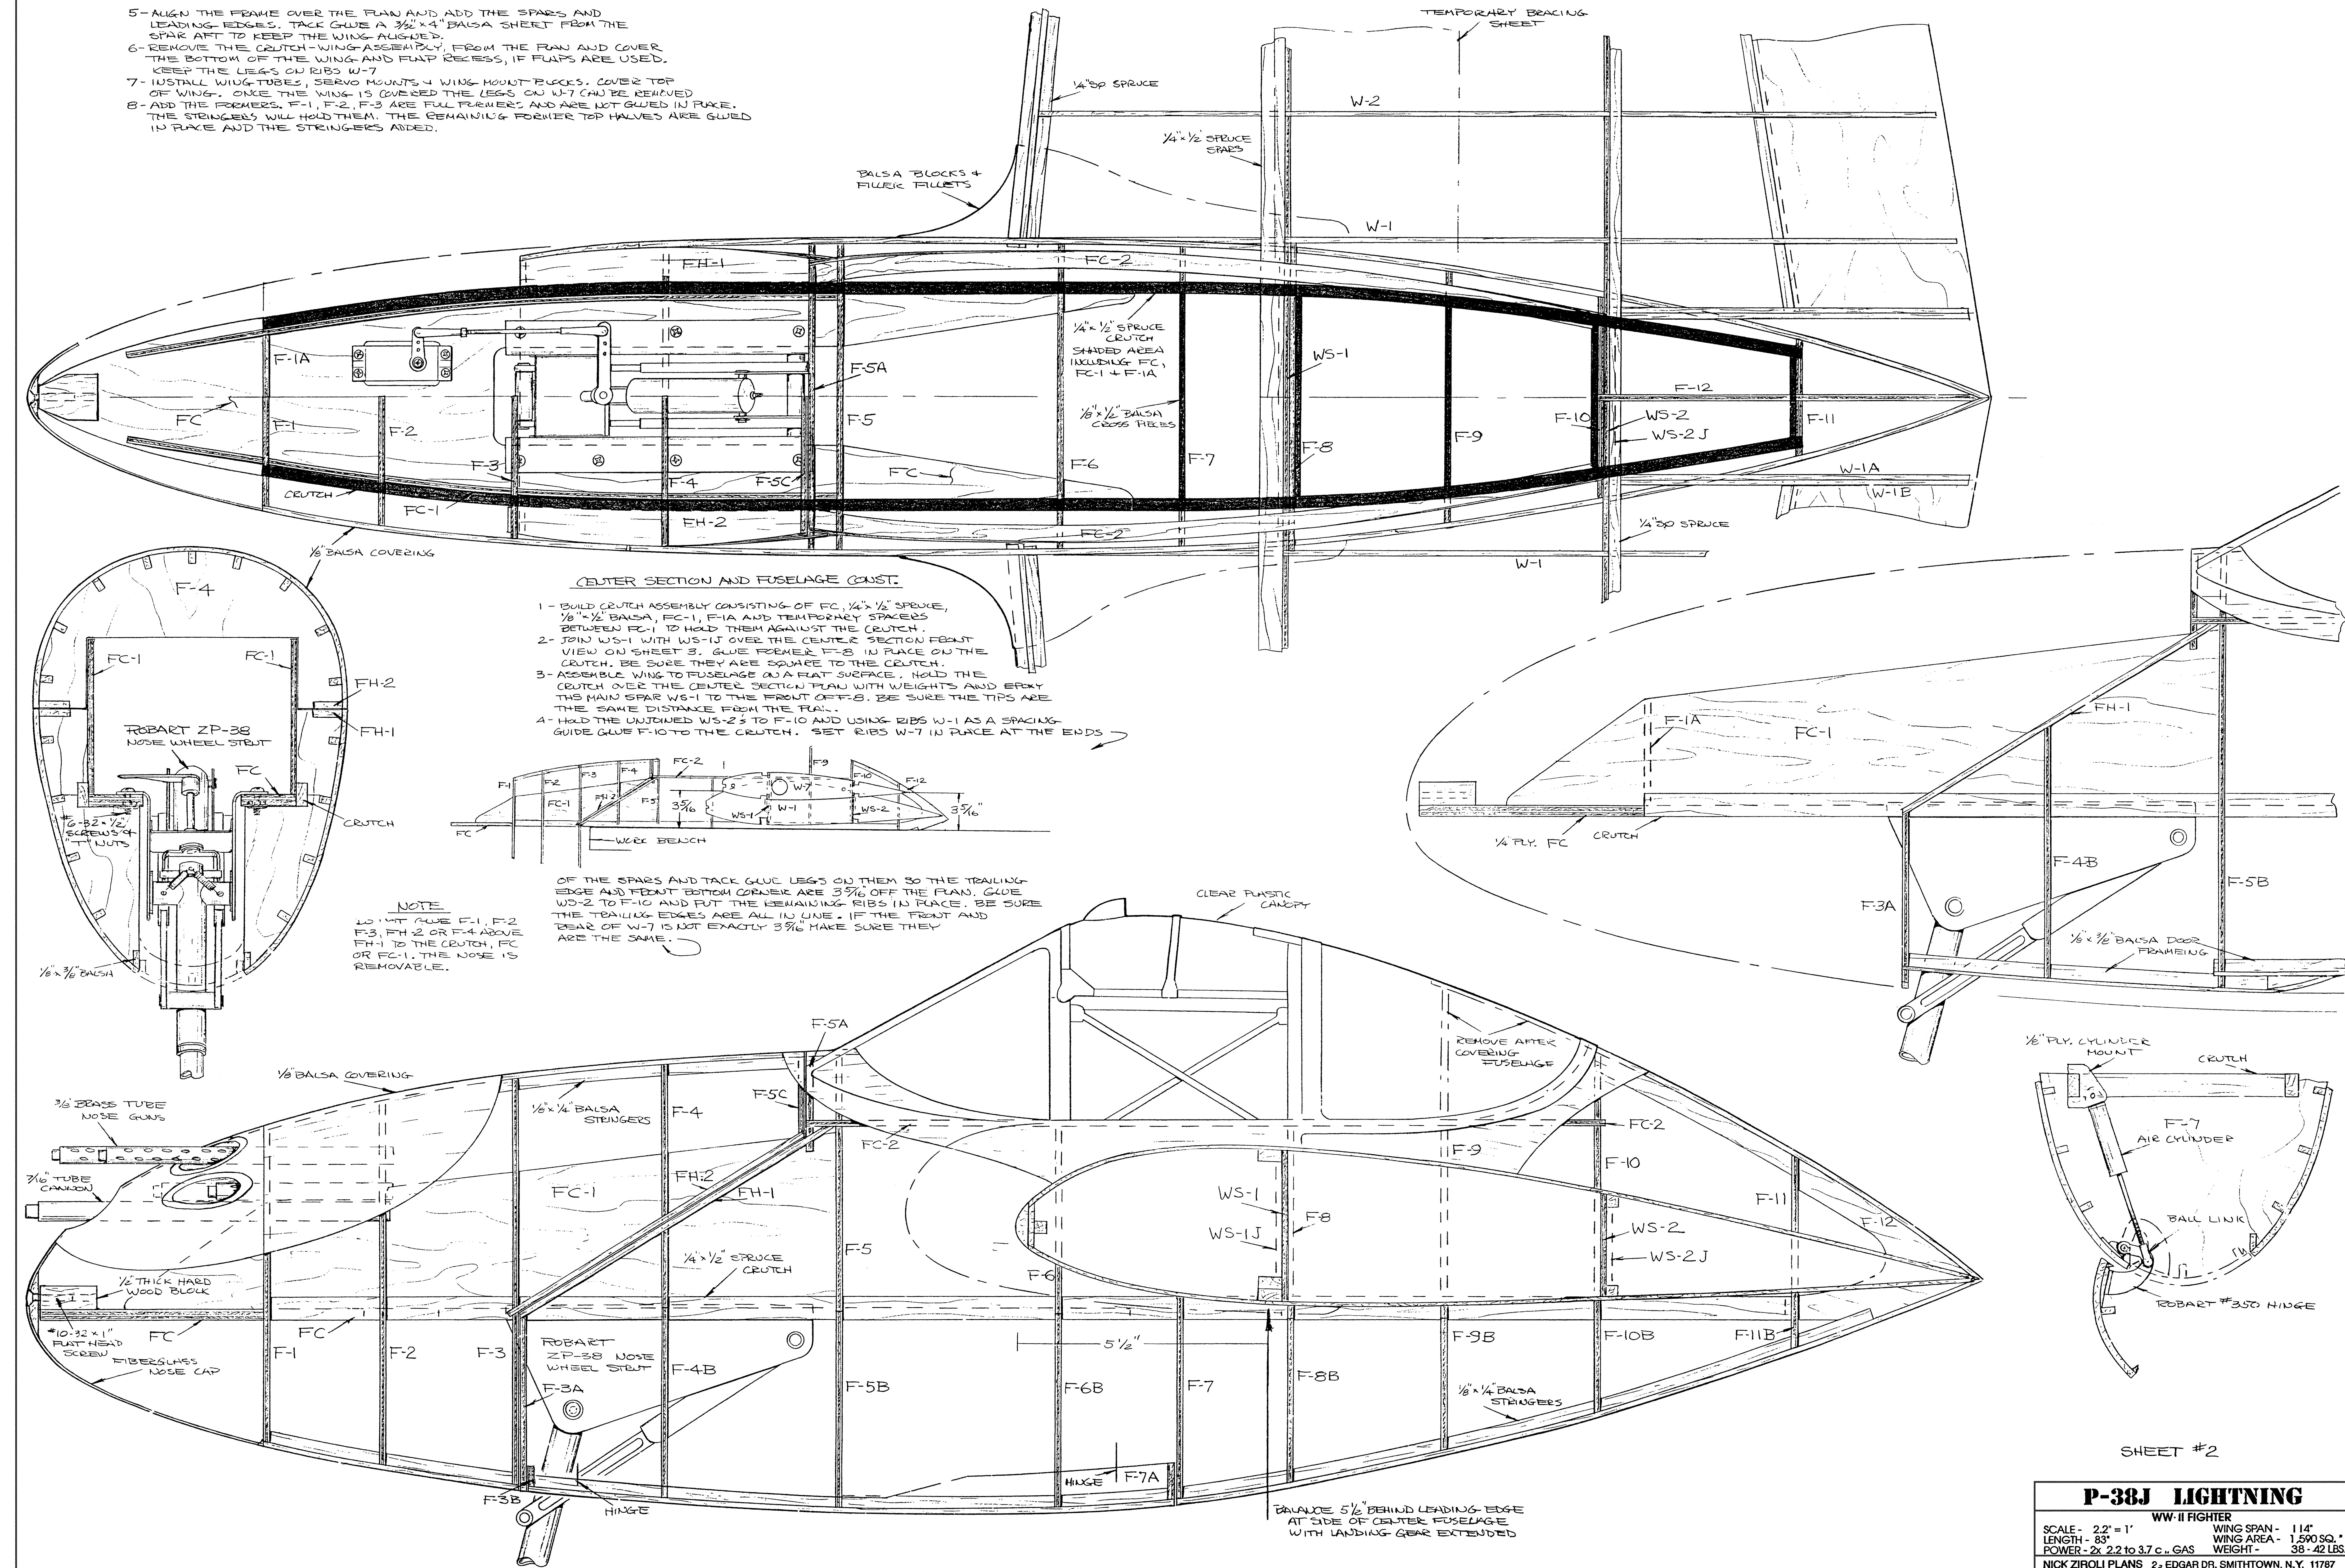

SHEET #2

P-38J LIGHTNING

WW-II FIGHTER	
SCALE - 2.2" = 1'	WING SPAN - 114"
LENGTH - 83"	WING AREA - 1,590 SQ. "
POWER - 2x 2.2 to 3.7 c., GAS	WEIGHT - 38 - 42 LBS.
NICK ZIROLLI PLANS 2, EDGAR DR. SMITHTOWN, N.Y. 11787	