


ws: 144 inch
sheets 4 of 5

ws: 144 inch
sheets 4 of 5

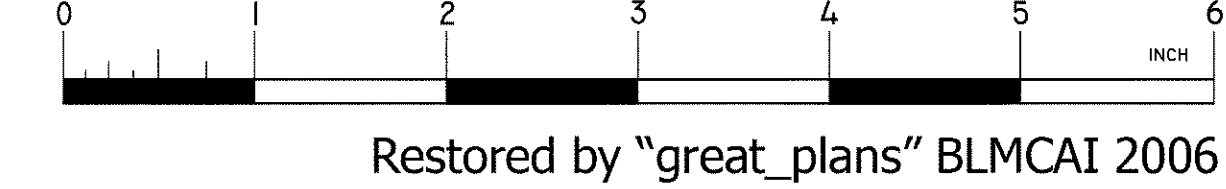


NOTE: STRUT DETAIL - AFTER ASSEMBLY
AND ALIGNMENT SLEEVES ARE POSITIONED
OVER CONNECTORS



.032" BRASS - SOLDER TO STRUTS
AFTER STRUTS ARE INSTALLED



3/8" SQ. BALSA
LEADING EDGE

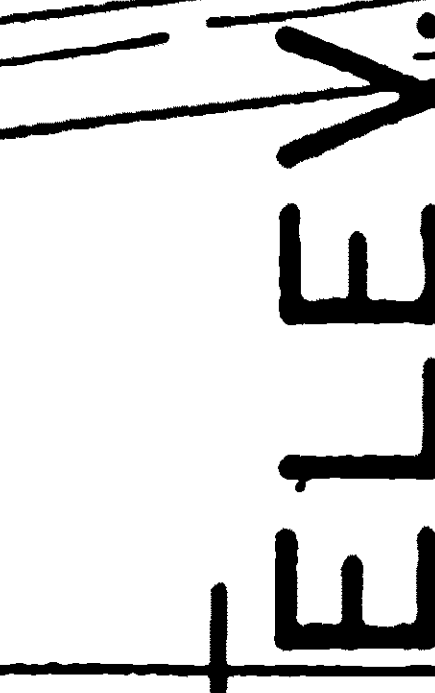

STAB.

LEFT WING PLAN



3.3"


3-1/4"

STRUT TOP

3/32" DIA. MUSIC
WIRE STRUTS-MAKE
2 OF EACH

JUST A REMINDER: These plans have had a scale change, as you working on your model, do not use any size written on the plan, please measure the drawing & use the measurement.

STRUT PATTERNS

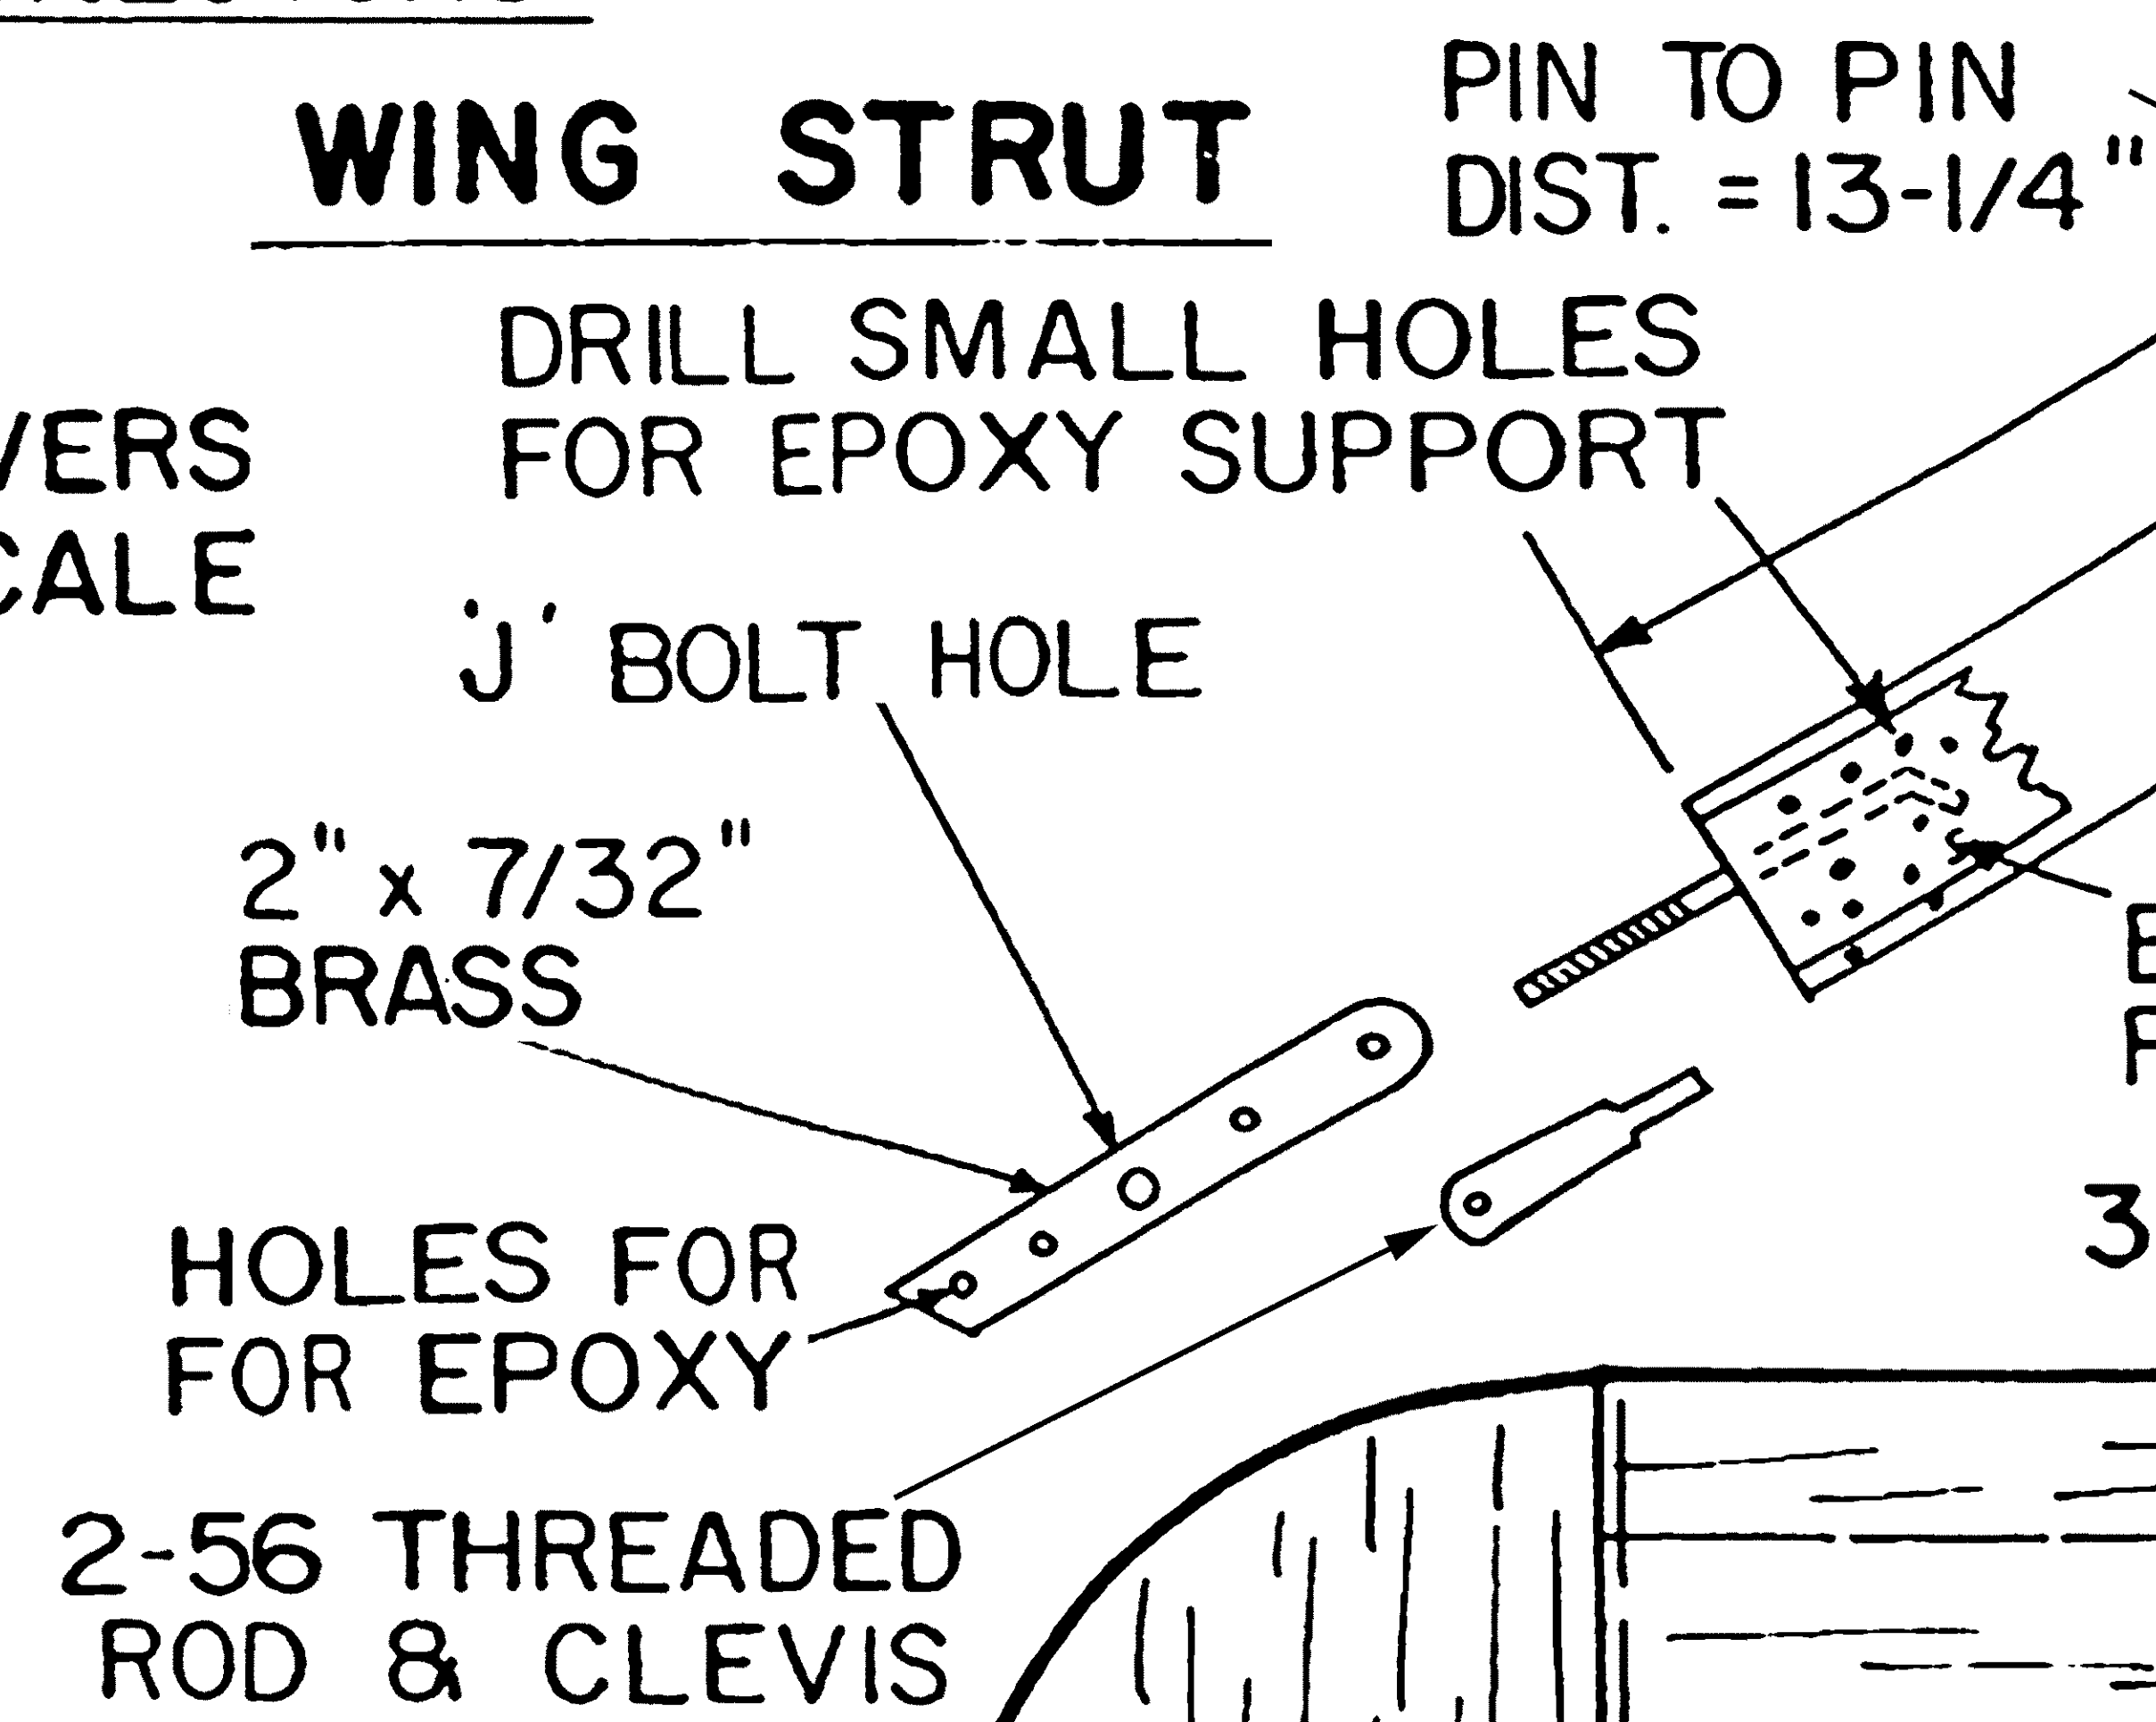

WING STRUT

PIN TO PIN
DIST = 13-1/4"

DRILL SMALL HOLES
FOR EPOXY SUPPORT

J' BOLT HOLE

2" x 7/32"
BRASS

HOLES FOR
FOR EPOXY

2-56 THREADED
ROD & CLEVIS

3/32" BALSA SHEET

3/8" SQ. BALSA
LEADING EDGE

1/16" Balsa
Sheeting

1/2" SQ
BALSA

3/8" G
BAL SA

AILERON
BELL CRANK

SEAL AIL. WITH 3/8 STRIP
MKA FILM AFTER ASSEMB.
AND COVERING

1/16" PLY
MOUNT

1/8" BALSA
SHEET
SPAR

TYPICAL HINGE INSTALLATION

FLAP
BLOCK

BLOCKING