


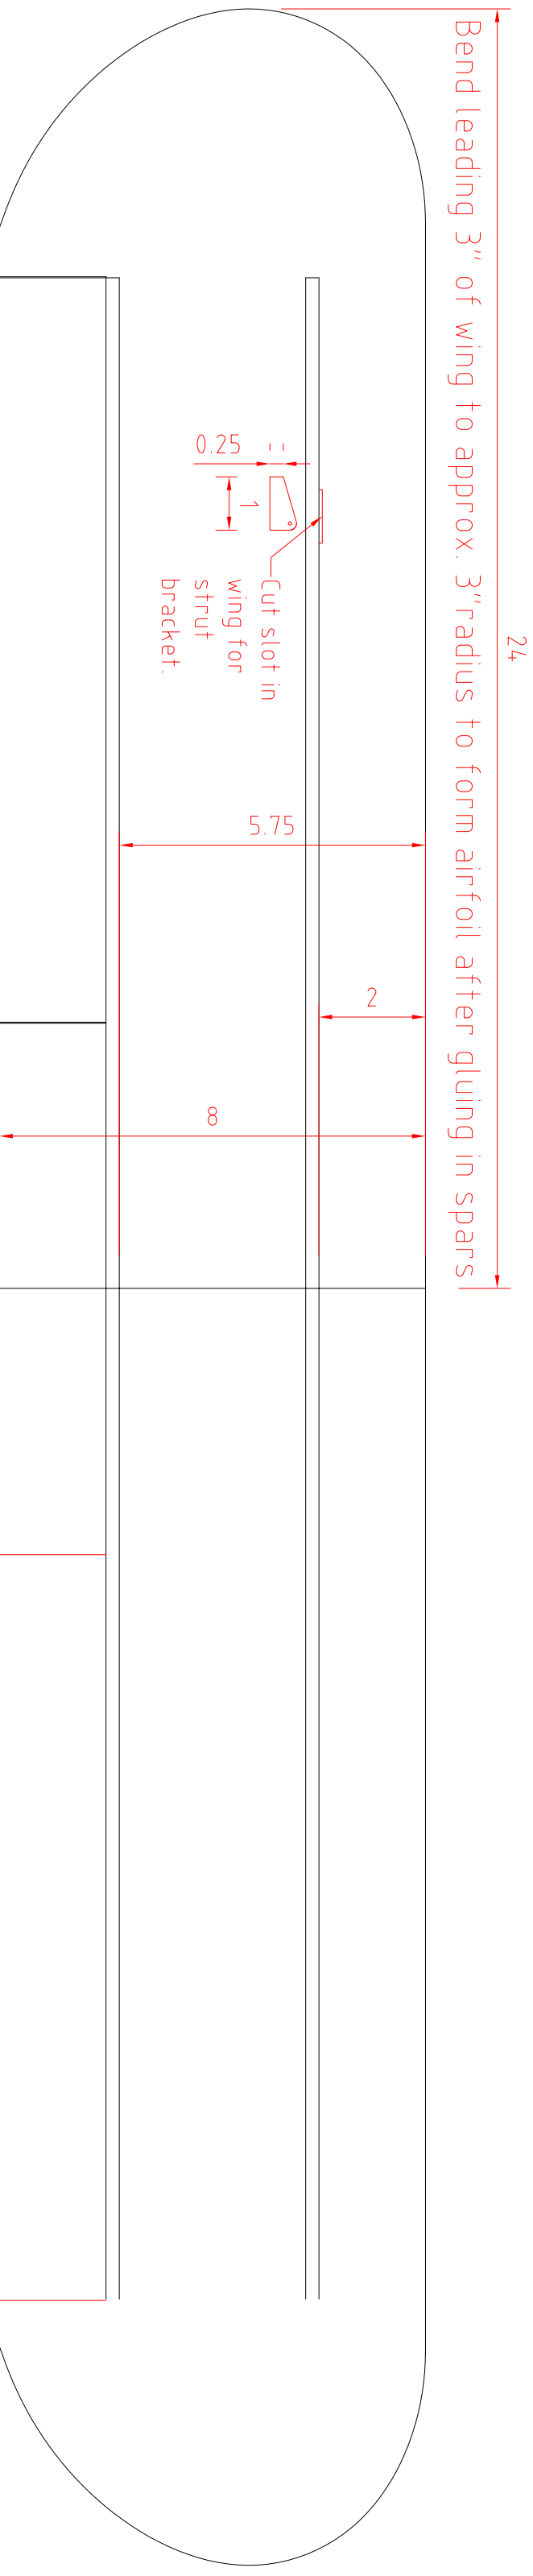

14

5

Make 2 wing struts from .125 OD carbon fiber tube. Insert 1 1/4 long piece of 2-56 threaded control rod with CA glue into end. Use threaded metal quick links to attach to wing and fuselage.

3/16 x 1/4 Spars w/ 1/4 x 1/4 center doublers

