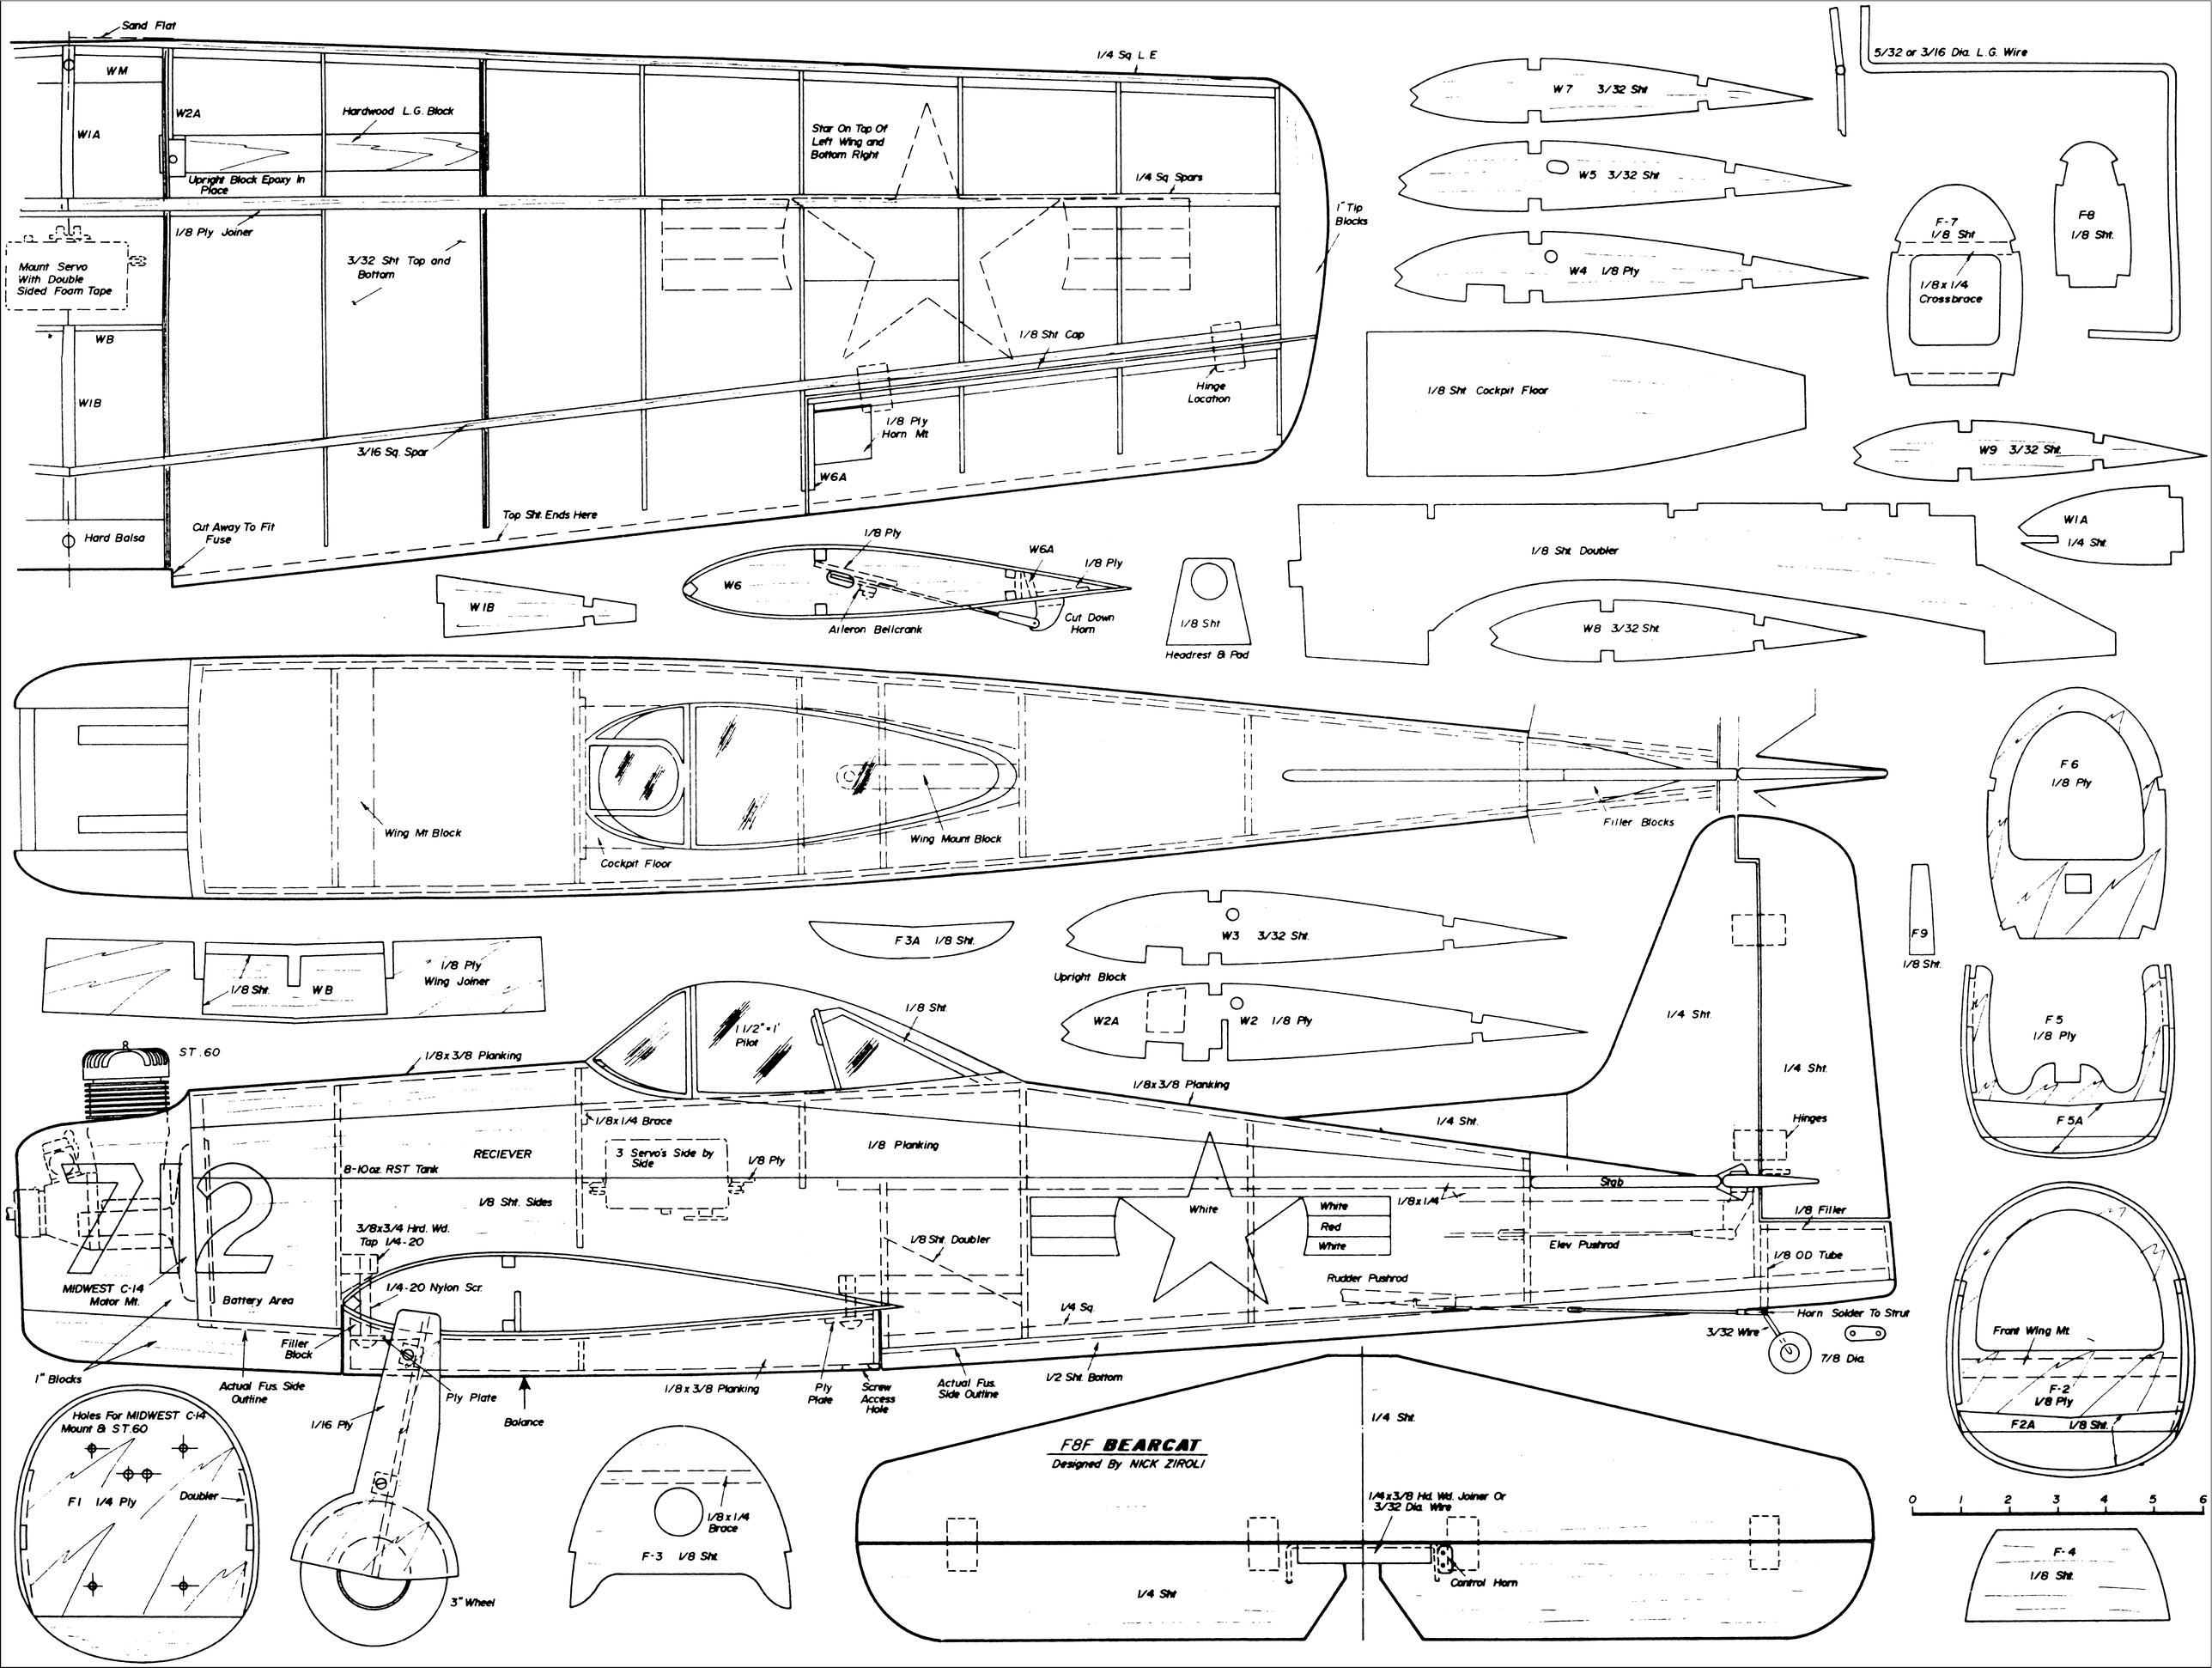
Sand Flat
WM
W1A
W2A
Hardwood L.G. Block
Upright Block Epoxy In Place
1/8 Ply Joiner
Mount Servo With Double Sided Foam Tape
3/32 Sht Top and Bottom
WB
W1B
3/16 Sq. Spar
Hard Balsa
Cut Away To Fit Fuse
Top Sht. Ends Here
1/4 Sq. L.E
Star On Top Of Left Wing and Bottom Right
1/4 Sq. Spars
1" Tip Blocks
1/8 Sht. Cap
Hinge Location
1/8 Ply Horn Mt
W6A
W1B
W6
1/8 Ply
Aileron Bellcrank
Cut Down Horn
1/8 Sht
Headrest & Pad
W7 3/32 Sht
W5 3/32 Sht
W4 1/8 Ply
1/8 Sht Cockpit Floor
5/32 or 3/16 Dia. L.G. Wire
F-7 1/8 Sht
1/8 x 1/4 Crossbrace
F8 1/8 Sht.
W9 3/32 Sht.
1/8 Sht. Doubler
W8 3/32 Sht
W1A 1/4 Sht.
Wing Mt Block
Cockpit Floor
Wing Mount Block
Filler Blocks
F6 1/8 Ply
F9 1/8 Sht.
F3A 1/8 Sht.
W3 3/32 Sht.
Upright Block
W2A
W2 1/8 Ply
1/8 Ply Wing Joiner
1/8 Sht.
WB
ST.60
1/8 x 3/8 Planking
1 1/2" = 1' Pilot
1/8 Sht.
1/8 x 3/8 Planking
1/4 Sht.
1/4 Sht.
1/4 Sht.
Hinges
F5 1/8 Ply
F5A
1/8 x 1/4 Brace
RECIEVER
3 Servo's Side by Side
1/8 Ply
1/8 Planking
8-10oz. RST Tank
1/8 Sht. Sides
White
White
Red
White
1/8 x 1/4
Stab
1/8 Filler
3/8 x 3/4 Hrd. Wd. Tap 1/4-20
1/8 Sht. Doubler
Elev Pushrod
1/8 OD Tube
MIDWEST C-14 Motor Mt.
Battery Area
1/4-20 Nylon Scr.
Rudder Pushrod
1/4 Sq.
Horn Solder To Strut
3/32 Wire
7/8 Dia.
Front Wing Mt.
F-2 1/8 Ply
F2A 1/8 Sht.
1" Blocks
Actual Fus. Side Outline
Filler Block
Ply Plate
Balance
1/8 x 3/8 Planking
Ply Plate
Screw Access Hole
Actual Fus. Side Outline
1/2 Sht. Bottom
Holes For MIDWEST C-14 Mount & ST.60
F1 1/4 Ply
Doubler
1/16 Ply
3" Wheel
1/8 x 1/4 Brace
F-3 1/8 Sht.
F8F BEARCAT
Designed By NICK ZIROLI
1/4 Sht.
1/4 x 3/8 Hd. Wd. Joiner Or 3/32 Dia. Wire
Control Horn
1/4 Sht
0 1 2 3 4 5 6
F-4 1/8 Sht.